

LEGO[®] EIFFEL TOWER #10307 LIGHT KIT

INSTALLATION GUIDE

Part 1 of 2



Light My Bricks



LEGO[®] EIFFEL TOWER 10307 INSTALLATION GUIDE

Hi There!

We're here to help you get started on the LEGO®

Eiffel Tower 10307 Light Kit.

This PDF details the instructions for the LED light kit only. If you are wishing to purchase this product, please <u>click here</u> to view the product page.

If you run into any issues, please refer to the troubleshooting section towards the end of this guide.

Have fun and enjoy!





* Indicates components which include spares



Individual Bags



- 28x White 30cm Micro Bit Light *
- 8x White 15cm Micro Bit Light
- 2x RGB 15cm Bit Light 2.0
- 15x RGB Strip Light 2.0 *
- 2x White 15cm Bit Light
- 1x 2Pin-3Pin 30cm Connecting Cable

Mixed Components 1



- 4x 2-Port Expansion Board 3x 6-Port Expansion Board
- 36x Adhesive Square *

Mixed Components 2



5x 8-Port Micro Expansion Board *

Mixed Components 3



2x IR Switch Board

1x 3Pin Sparkle Effects Control Board

USB Power Cable



2x USB Power Cable

(Power Source not Included)

Connecting Cables



1x 5cm Connecting Cable 4x 15cm Connecting Cable 8x 30cm Connecting Cable * 5x 50cm Connecting Cable * 1x 120cm Connecting Cable

RGB Connecting Cables



10x RGB 15cm Connecting Cable 6x RGB 30cm Connecting Cable *



PACKAGE CONTENTS:

Mixed Components 4



8x Plate, Round 1x1 Open Stud - Black 4x Plate, Round 1x1 with Bar Handle - Black 4x Tile, Modified 1x1 with Open O Clip - Black 4x Bracket 1x1 - 1x1 Inverted - Dark Bluish Gray

Mixed Components 5



8x Brick 1x2 - Black



5x Light String 15 LED 3Pin - Warm White

Mixed Components 6



8x Tile 1x6 - Black

Mixed Components 7



4x Plate 1x6 - Black

Light String Warm White 15 LED 3 Pin



6x Light String 15 LED 3Pin – Warm White

Light String Warm White 15 LED 3 Pin



RGB Components



1x RGB Remote Control 3x RGB Control Board


1x RGB 6-Port Expansion Board



Contents

Before You Begin	5
Blueprint	11
Instructions: Part 1	15
Troubleshooting	91
Contact	95



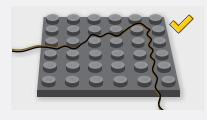



Laying cables in between and underneath bricks

Cables can fit in between and underneath LEGO® bricks, plates, and tiles providing they are laid correctly between the LEGO® studs. Do NOT forcefully join LEGO® together around cables; instead ensure they are laying comfortably in between each stud.

CAUTION: Forcing LEGO® to connect over a cable can result in damaging the cable and light.



Connecting Cable Connectors To Expansion Boards

Take extra care when inserting connectors to ports of Expansion Boards. Connectors can be inserted only one way. With the expansion board facing up, look for the soldered "=" symbol on the left side of the port. The connector side with the wires exposed should be facing toward the soldered "=" symbol as you insert into the port. If a plug won't fit easily into a port connector, do not force it.

Incorrectly inserting the connector can result in bent pins inside the port or possible overheating of the expansion board when connected.





Connecting Cable Connectors To Strip Lights

Take extra care when inserting connectors to ports on the Strip Lights. Connectors can be inserted only one way. With the Strip Light facing up, ensure the side of the connector with the wires exposed is facing down. If a plug won't fit easily into a port connector, don't force it. Doing so will damage the plug and the connector.




Connecting Micro Cable Connectors To Micro Expansion Board Ports

Take extra care when inserting the micro connectors to micro ports of Micro Expansion Boards. Connecting Micro Bit Lights to Micro Expansion Boards is similar to connecting lights and cables to Strip Lights. With the expansion board facing up, ensure the side of the connector with the wires exposed is facing down. If a plug won't fit easily into a port connector, do not force it. Use your fingernail to push the plastic part of the connector to the micro port.



Installing Bit Lights Under Lego[®] Bricks And Plates

When installing Bit Lights under LEGO® pieces, ensure they are placed the correct way up (Yellow LED component exposed). You can either place them directly on top of LEGO® studs or in between.

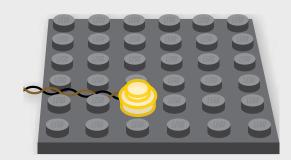







The Symbols Used In This Guide

When going through the following guide you will come across symbols and formats that will assist with the installation of your light kit. Take notice of them as each has a specific purpose.

Light Kit Component

This is the most important image format as it indicates which part to use from the Light Kit. Make sure you pay close attention to which part is shown.



Connect

Used when you need to connect a LEGO piece or LMB component.

Disconnect

Used when you need to remove a LEGO piece/ section or LMB component.

Directional

Used to show where to route cables, place components, or move them.

Bend/Pivot

Used when a component needs to be bent, or part folded or pivoted. \rightarrow

 \rightarrow

Turn/ Flip

Will be found in the top left corner when the set needs to be rotated or flipped.



Twist/ Braid

Seen when a set of cables need to be grouped and twisted together.



Power On Test

Found at the end of a major step to test the lights. Will be located in the top left corner.



Note

Notes will be found alongside the instruction photos and explain what to do.







Repeat Step

Repeat the previous step eg. Make a spotlight, then make a second spotlight.

Connect Focus

Used to highlight a hard to see area where a component is being connected.

Disconnect Focus

Used to highlight a hard to see area where a component is being disconnected.

\bigcirc

x2

General Focus

Used to highlight a hard to see area where a component needs to be acted on.



General Note

This is a sample note that is used anywhere in this guide. It will explain a difficult section where photos are hard to illustrate or easily confused.

Connect Note

The green coloured note is used when the topic focuses on a component being connected, like the shown Power Bank.

Disconnect Note

The red coloured note is used when the topic focuses on a component being disconnected or like here, the removed pieces.

ß

-4

U

Take the 5cm Connecting Cable from the 4-Port Micro Expansion Board and route it into the "IN" port of the Flicker Effects Board

NOTE

NOTE



 
BRICKS

Connect to a 5V USB Power Bank, 5V USB Wall Adaptor, or USB to AA Battery Pack (sold separately)


NOTE

You should have these parts left over that were removed from the LEGO set








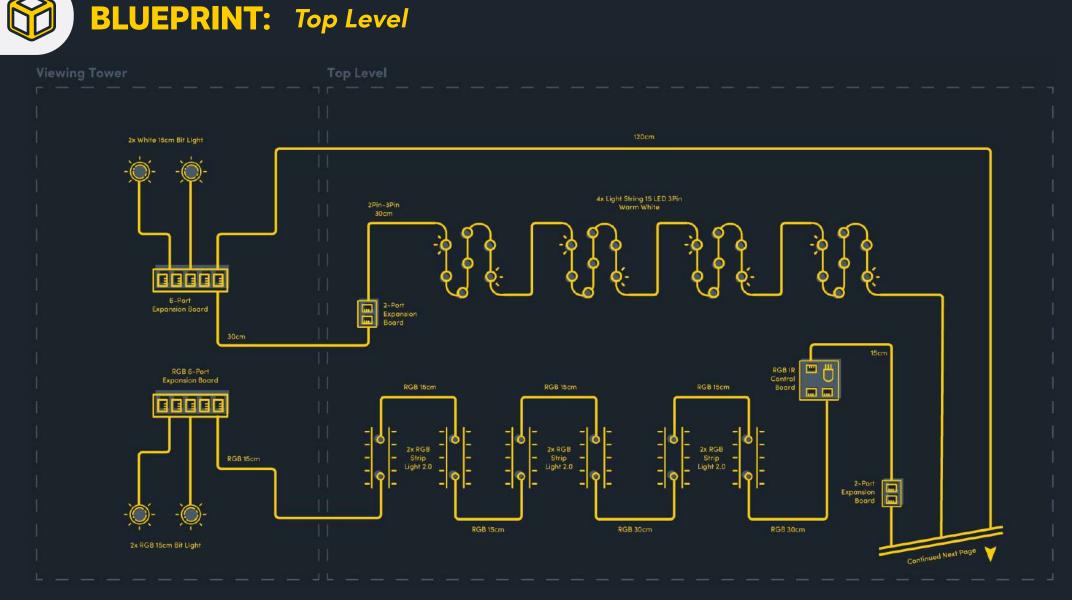






Middle Level

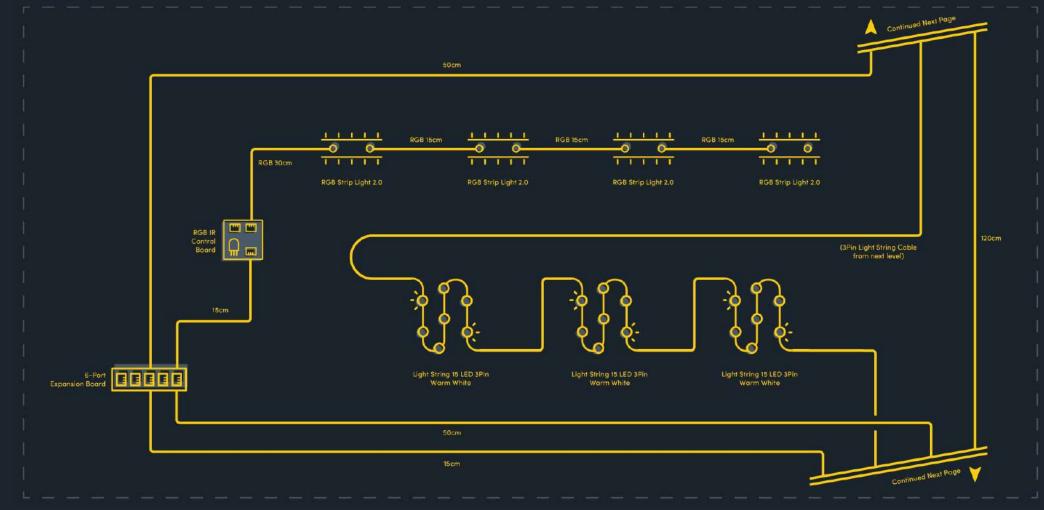





Bottom Level

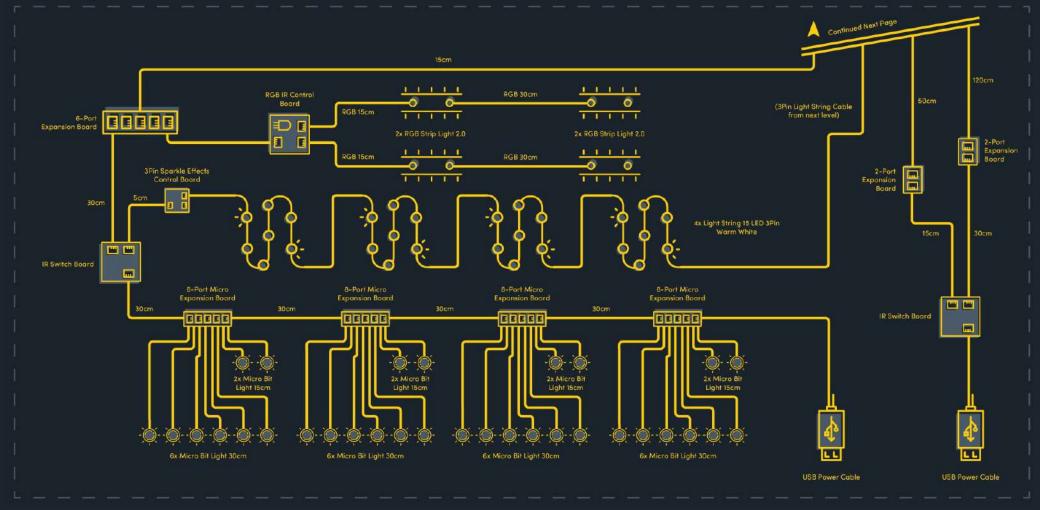







INSTRUCTIONS: Part 1

To ensure a smooth installation of your light kit, please read and follow each step carefully. If you run into any issues, please refer to the online troubleshooting guide.




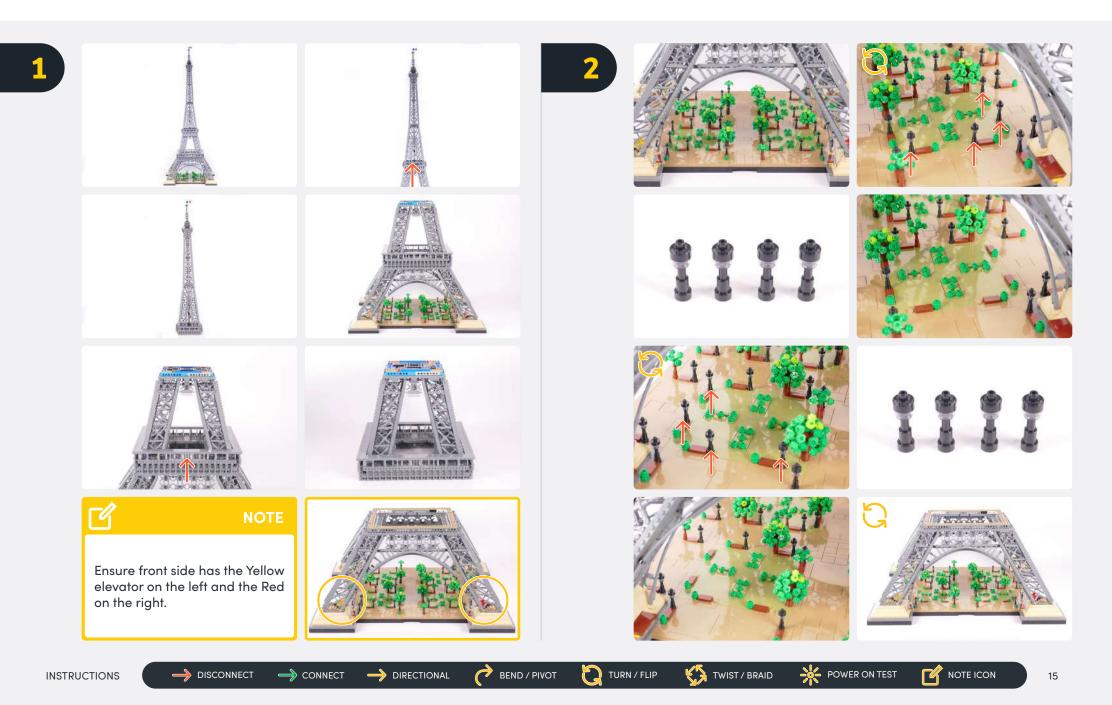



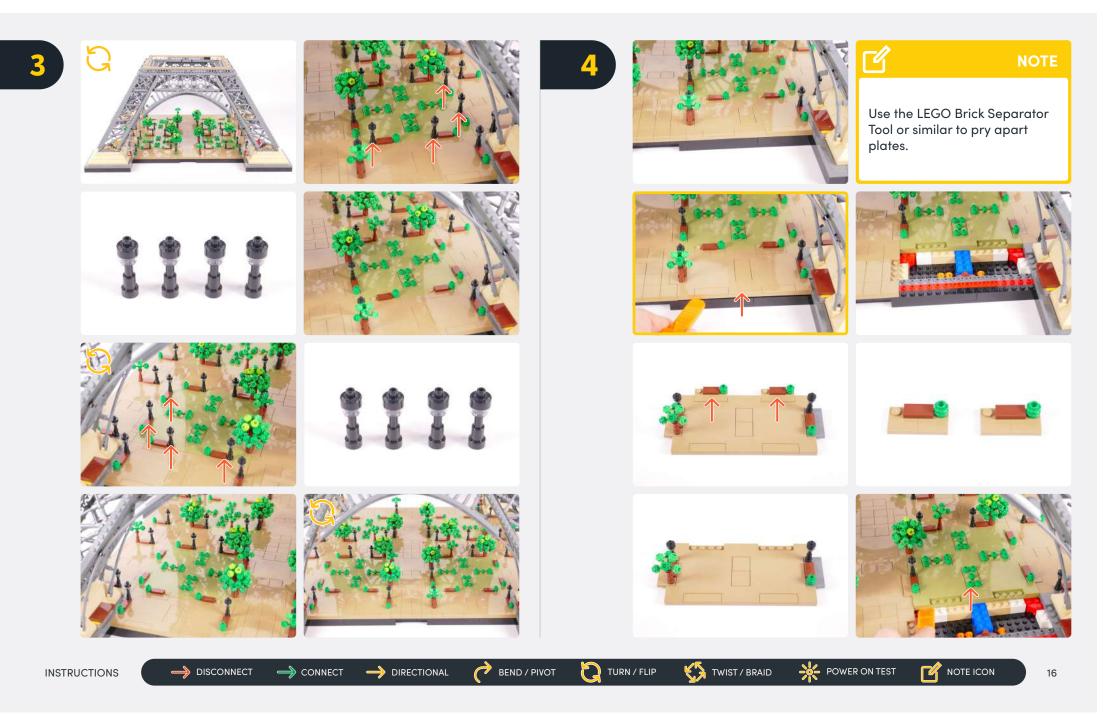



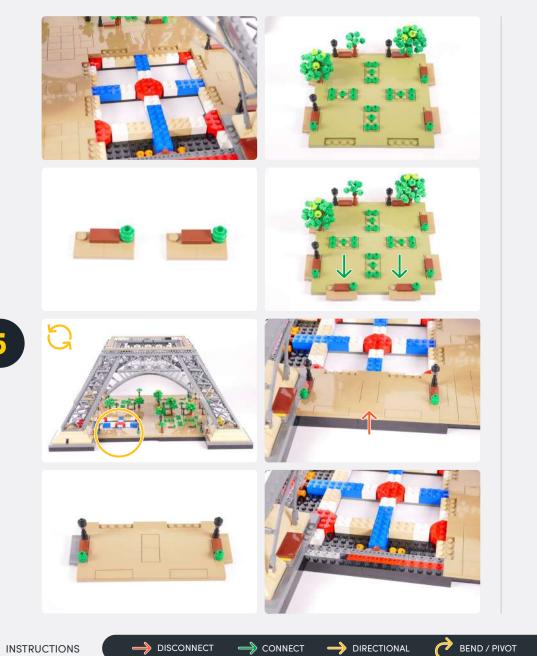










TWIST / BRAID

 TURN / FLIP











POWER ON TEST

 




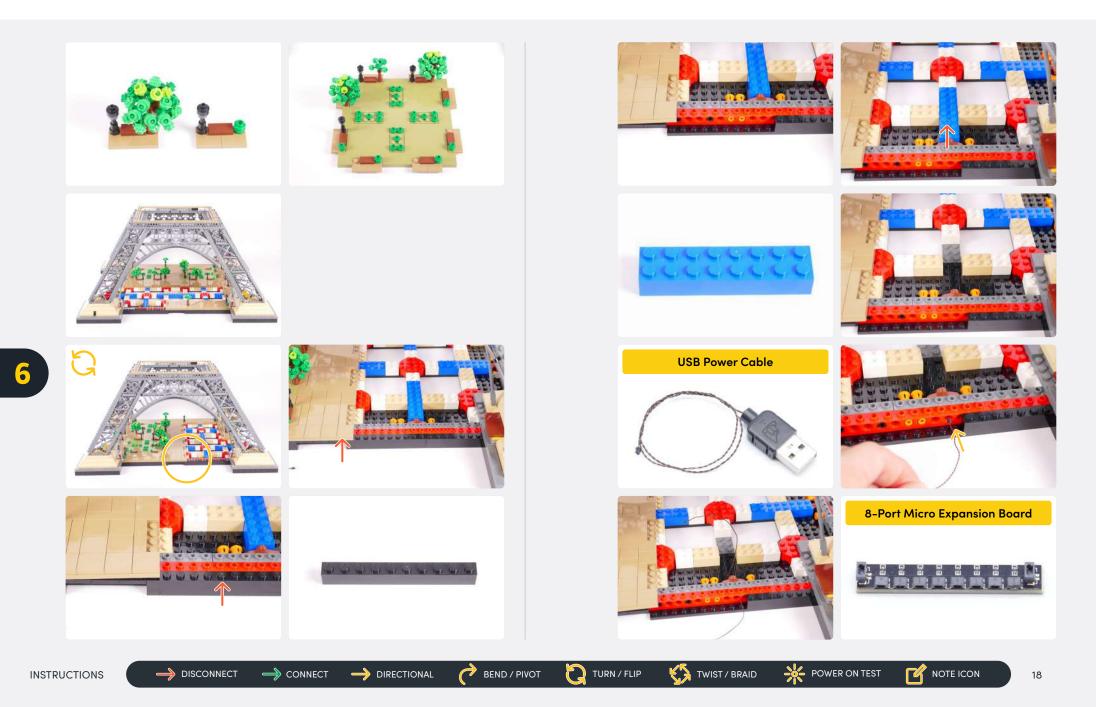






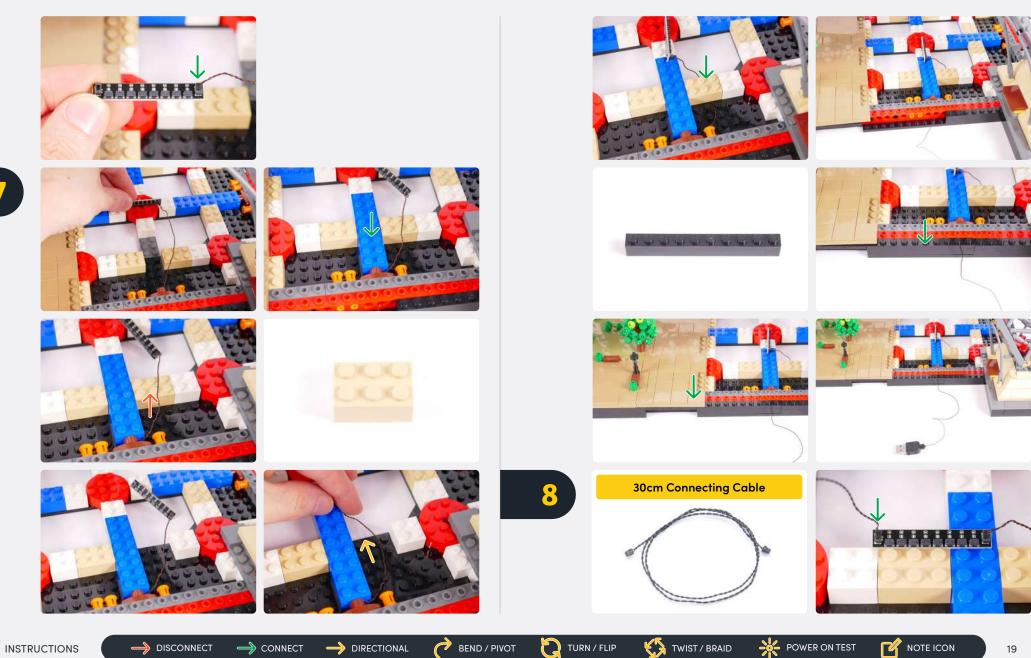




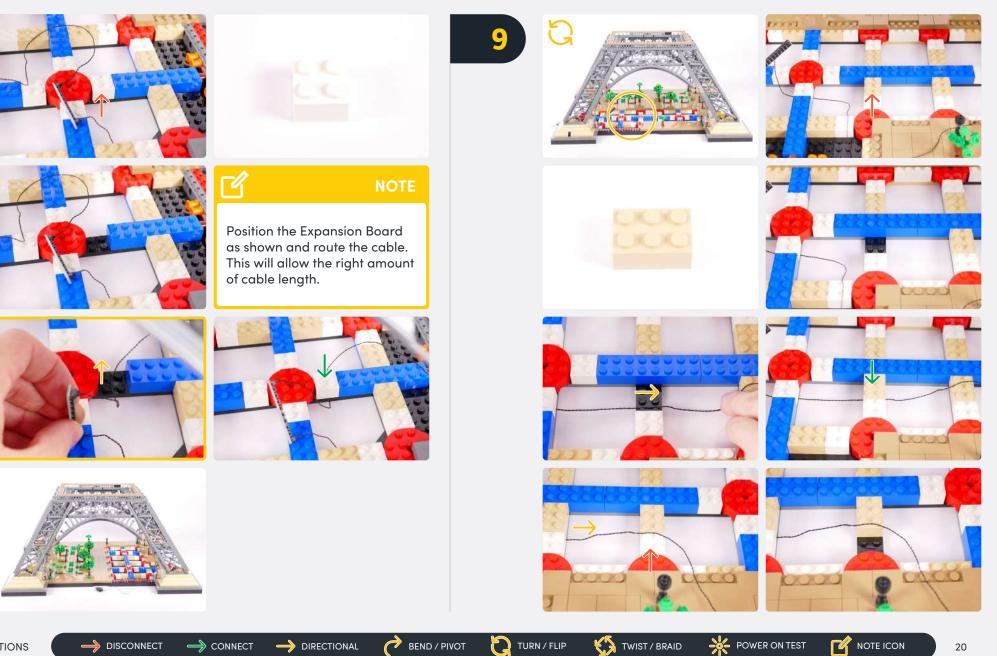


INSTRUCTIONS



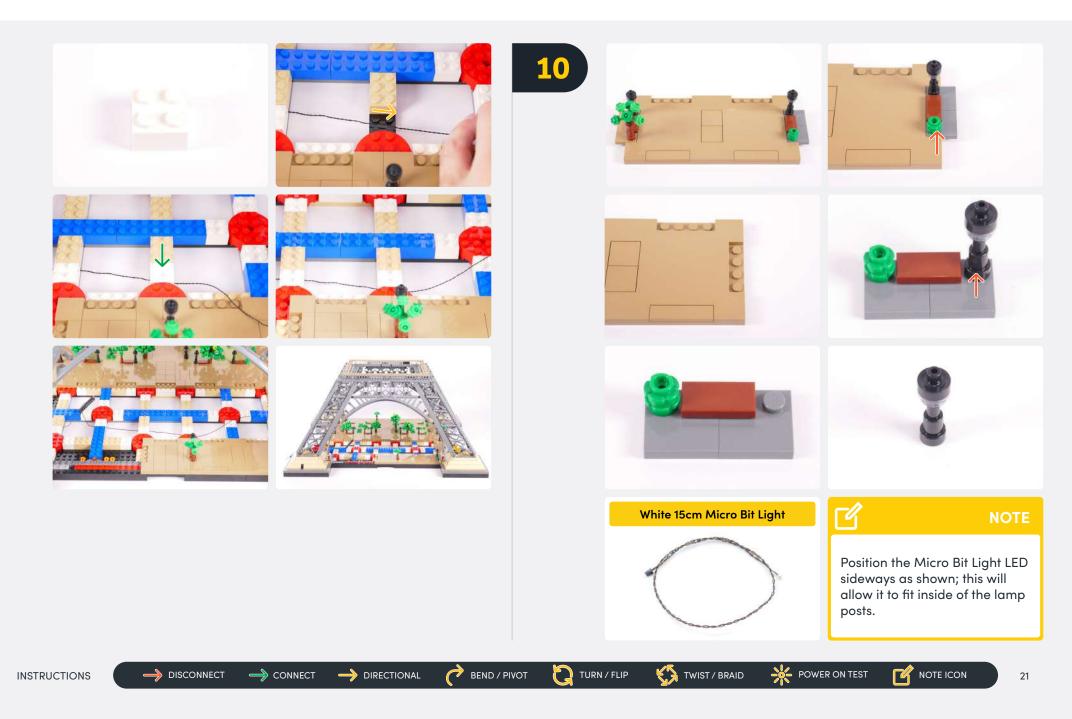







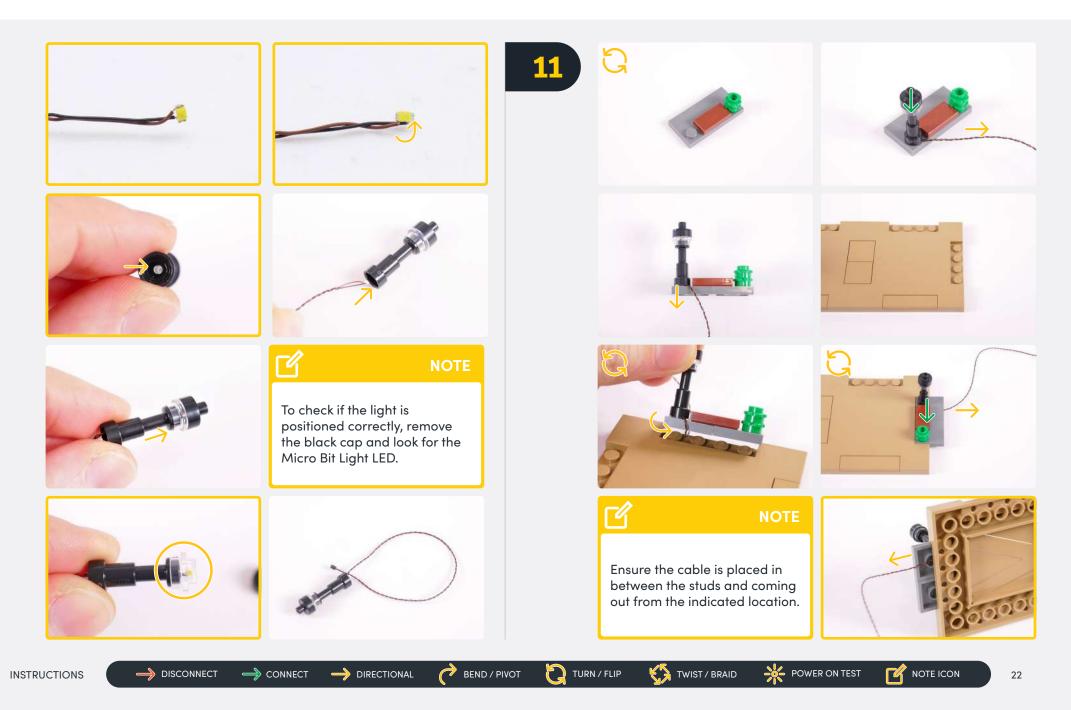




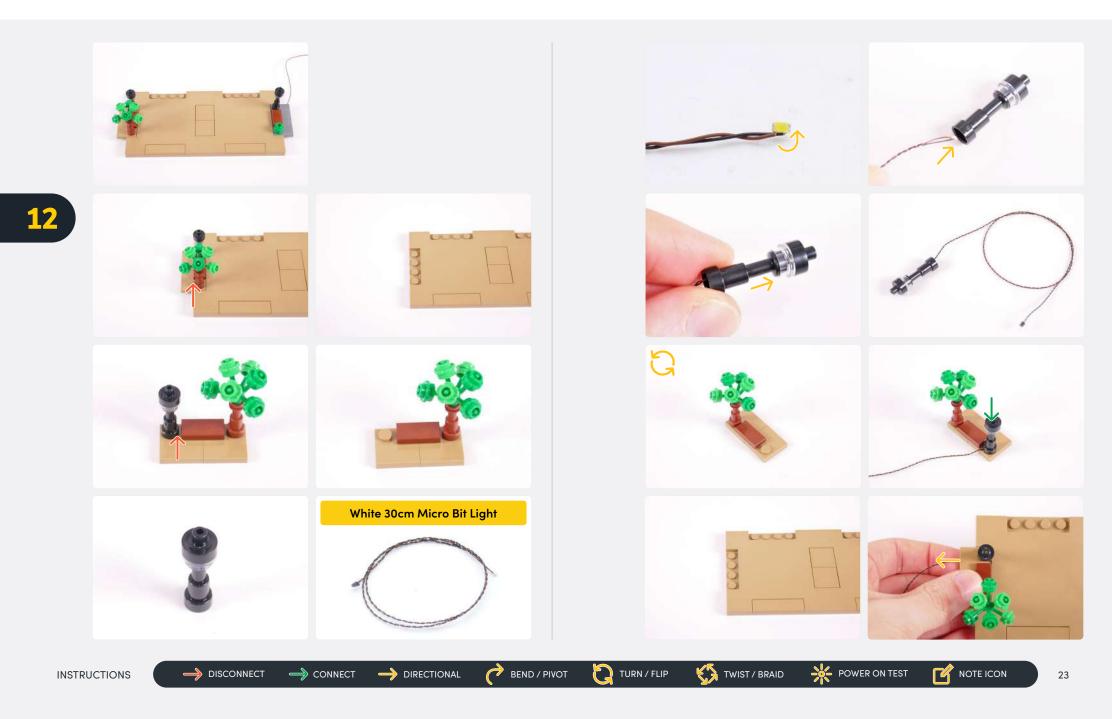





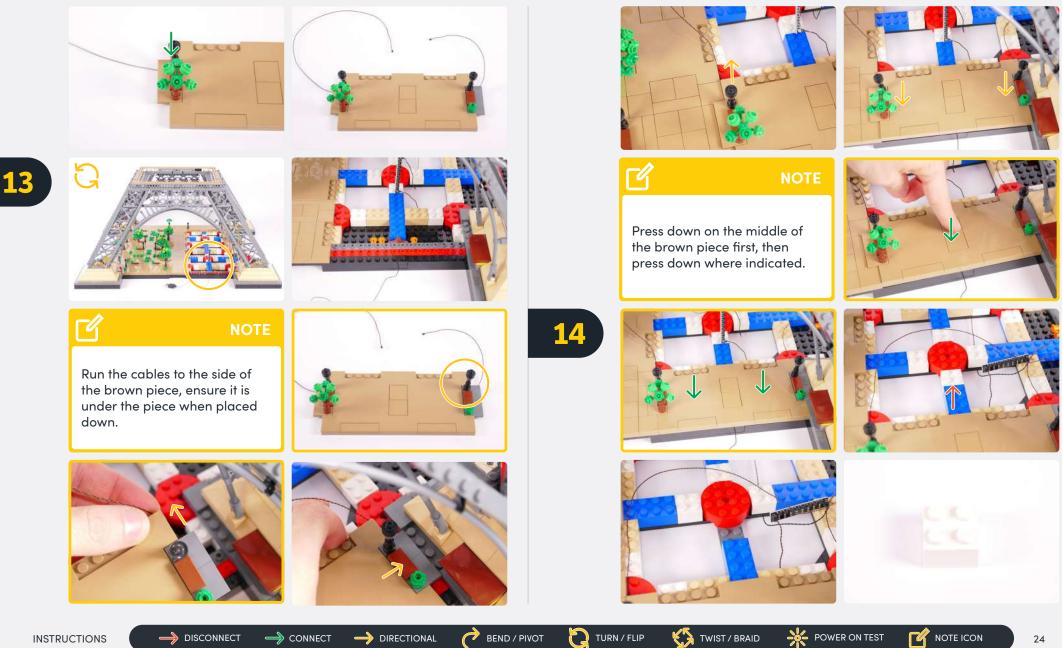



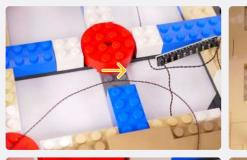

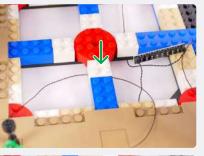

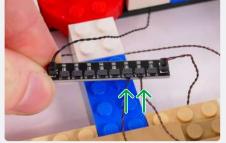





NOTE

Connect to a 5V USB Wall Adaptor (sold separately). A power bank or battery pack is not recommended to power this set.

 NOTE





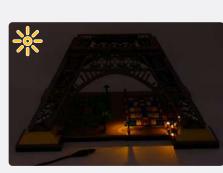













U


-> DIRECTIONAL BEND / PIVOT

TURN / FLIP









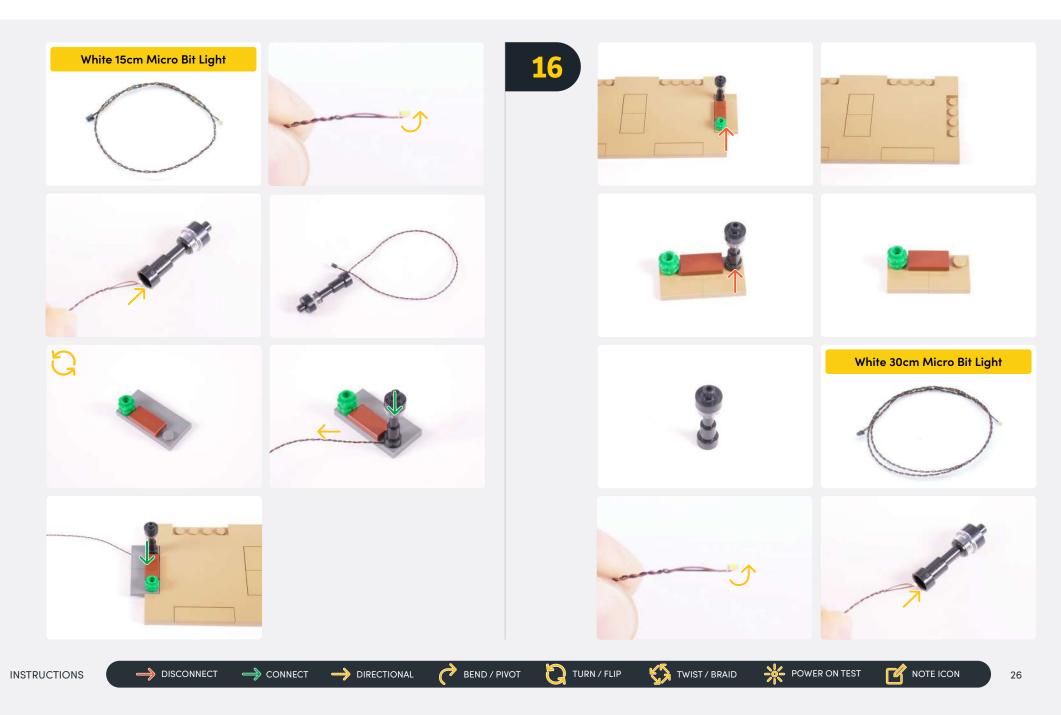



17

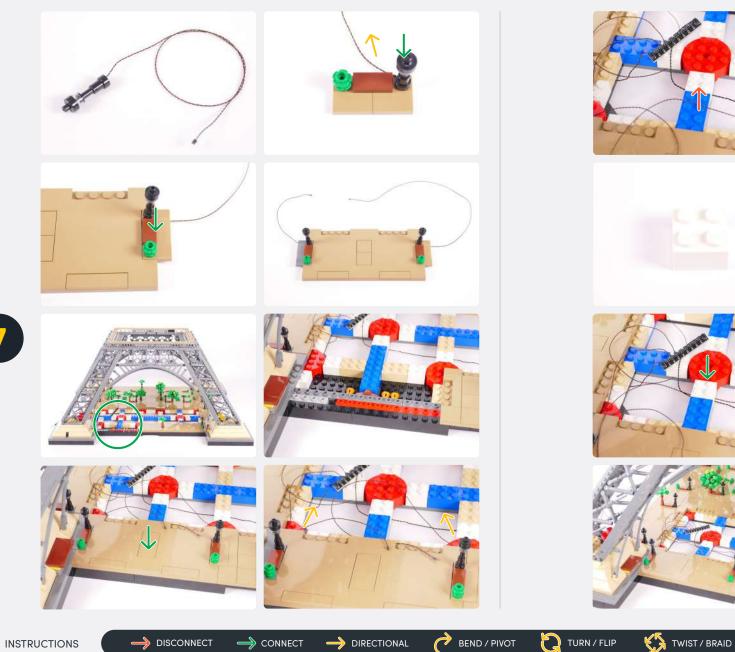

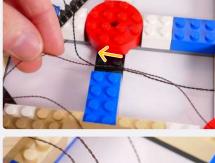









NOTE ICON

POWER ON TEST




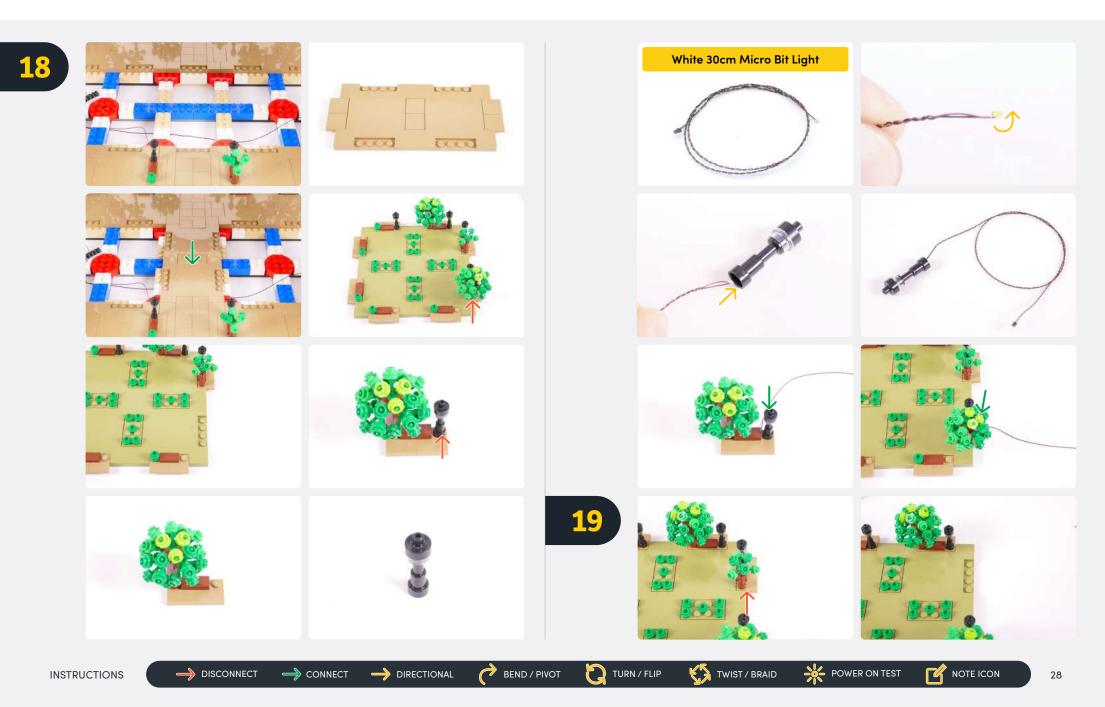




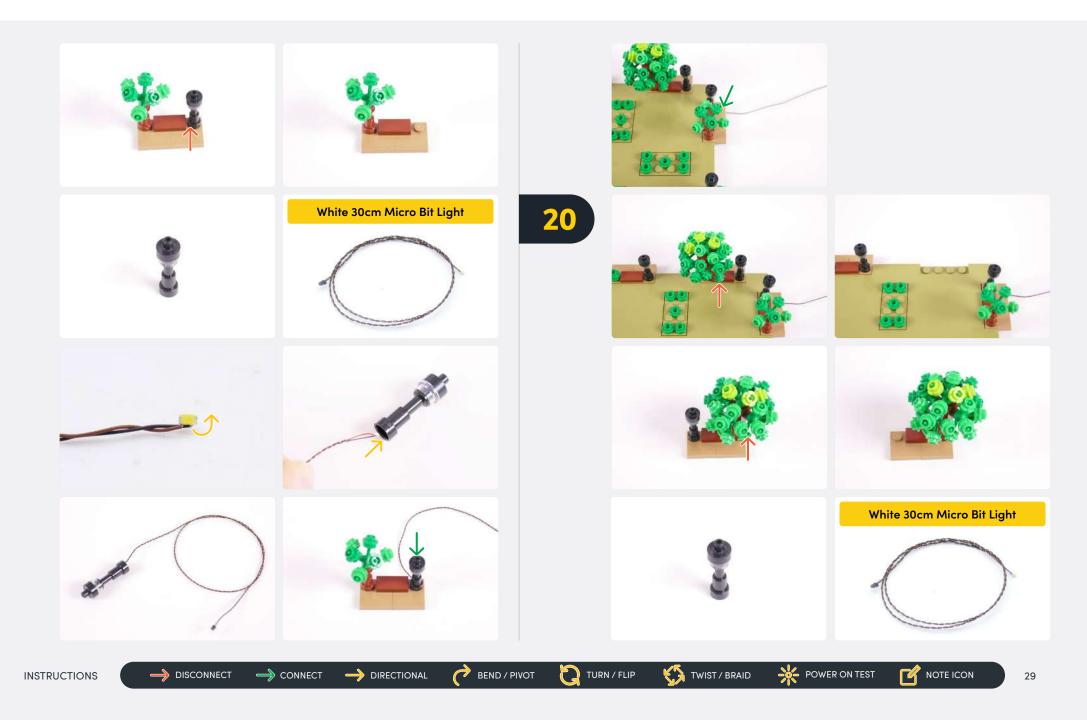



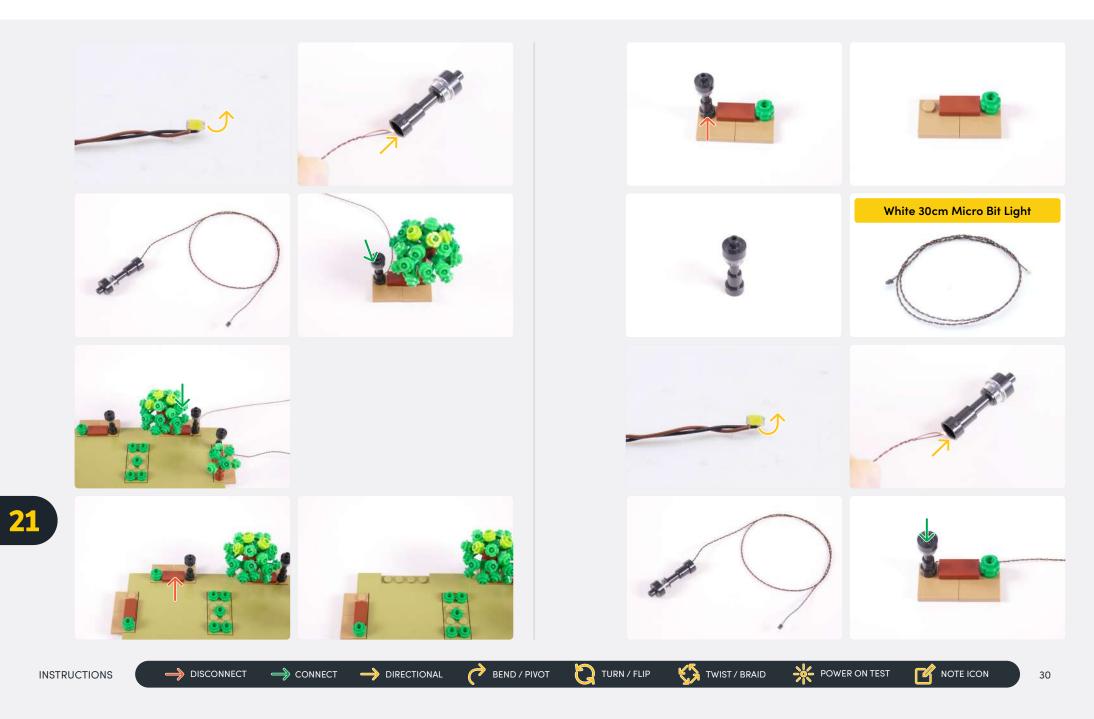




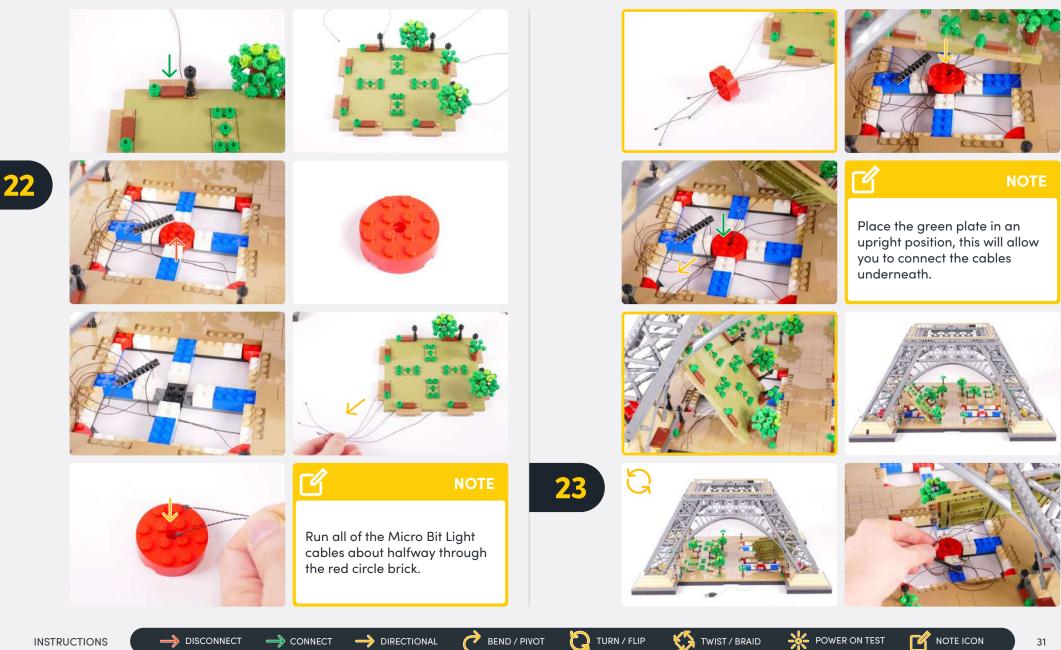

TURN / FLIP



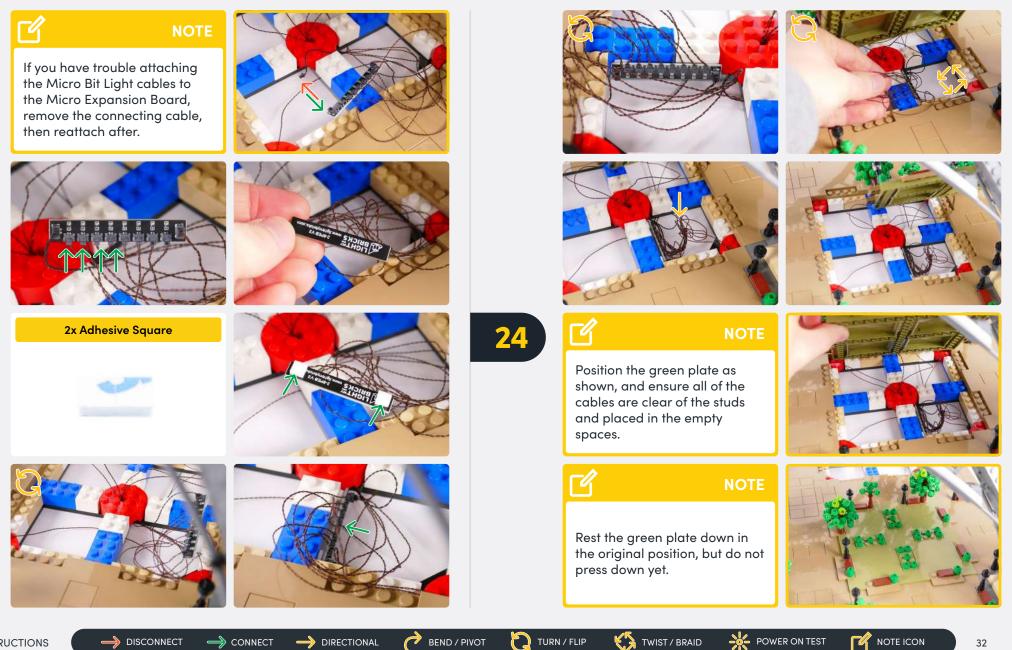

INSTRUCTIONS



Press down the centre of the green plate first, then press down each of the brown tile sections indicated.


NOTE









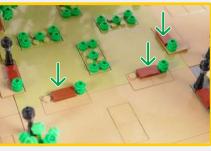

NOTE

25

Then press down the remaining sections by pressing on the edge of the brown plate of each. Ensure you do not press too hard.



ΓΊ

The green plate will be slightly raised but this is normal. There are several cables underneath and making it flat will break them.


NOTE










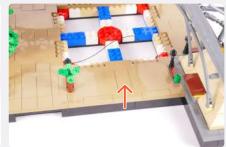

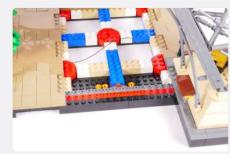




INSTRUCTIONS


-> DIRECTIONAL BEND / PIVOT

TURN / FLIP




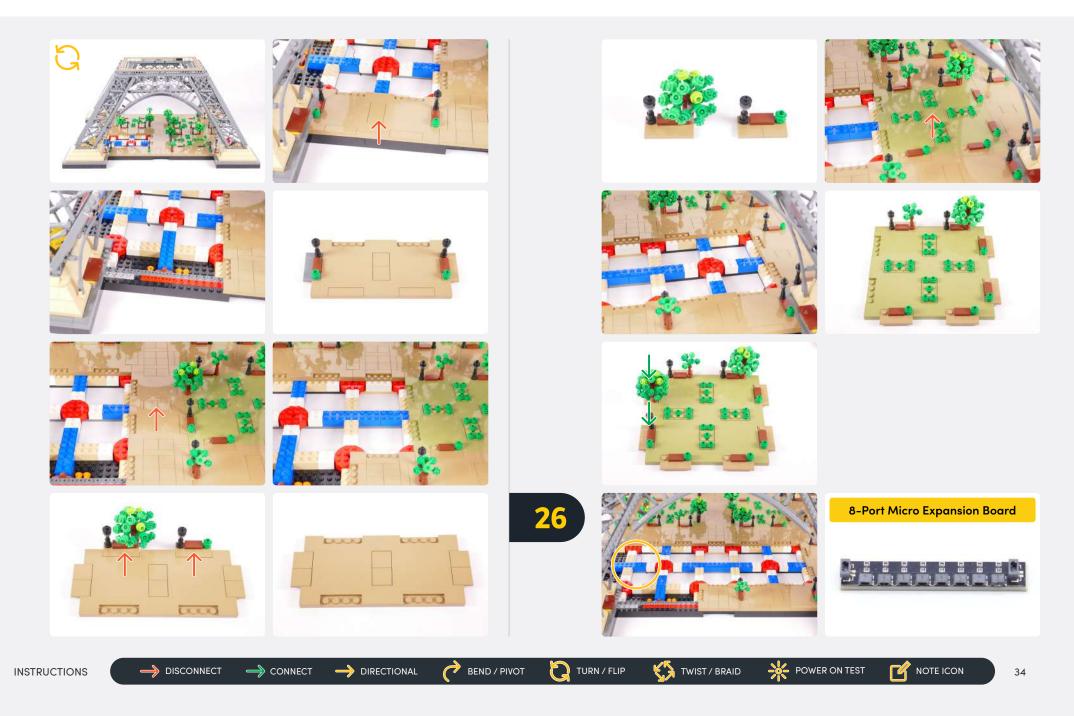




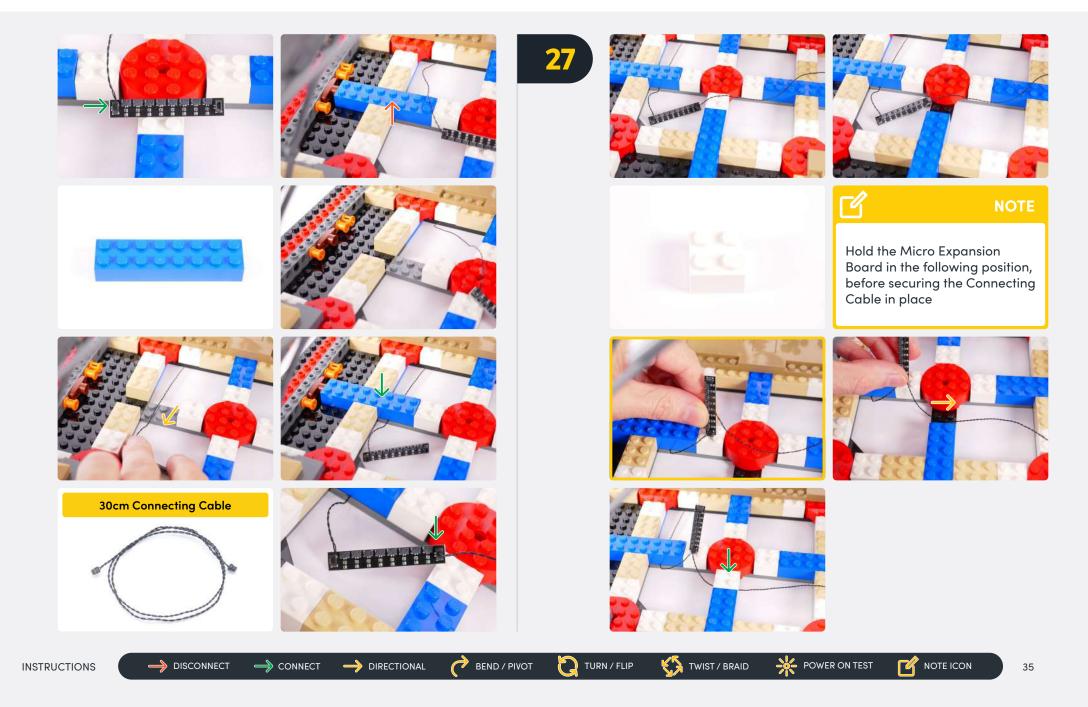



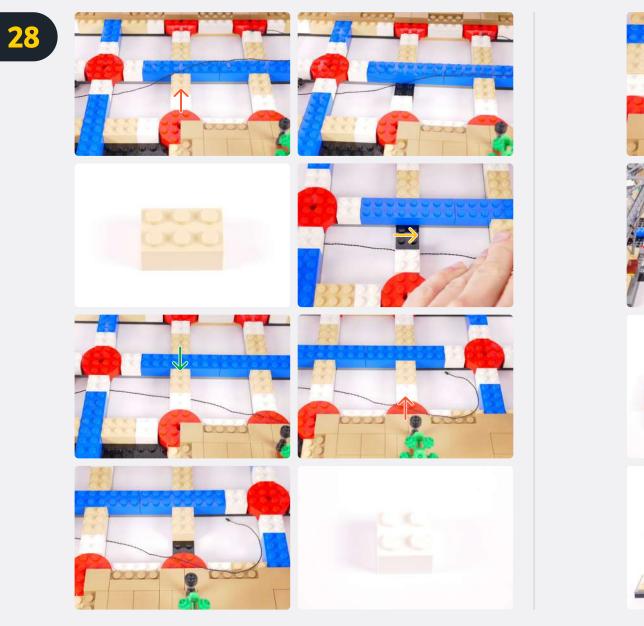

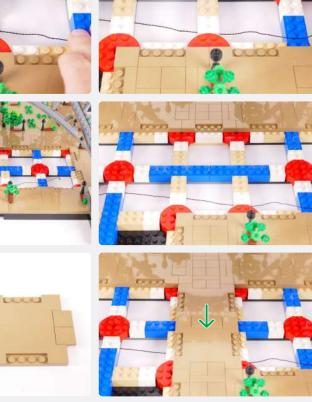



0000


CX X X X

INSTRUCTIONS


DIRECTIONAL
DIRECTIONAL
DIRECTIONAL

TURN / FLIP




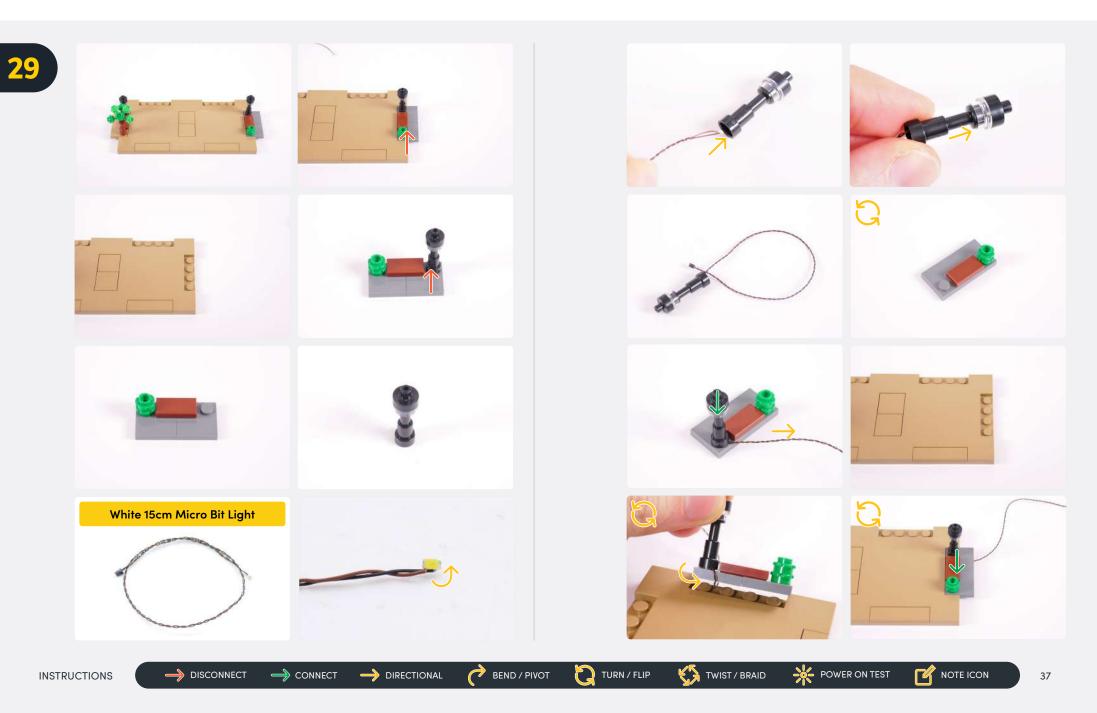




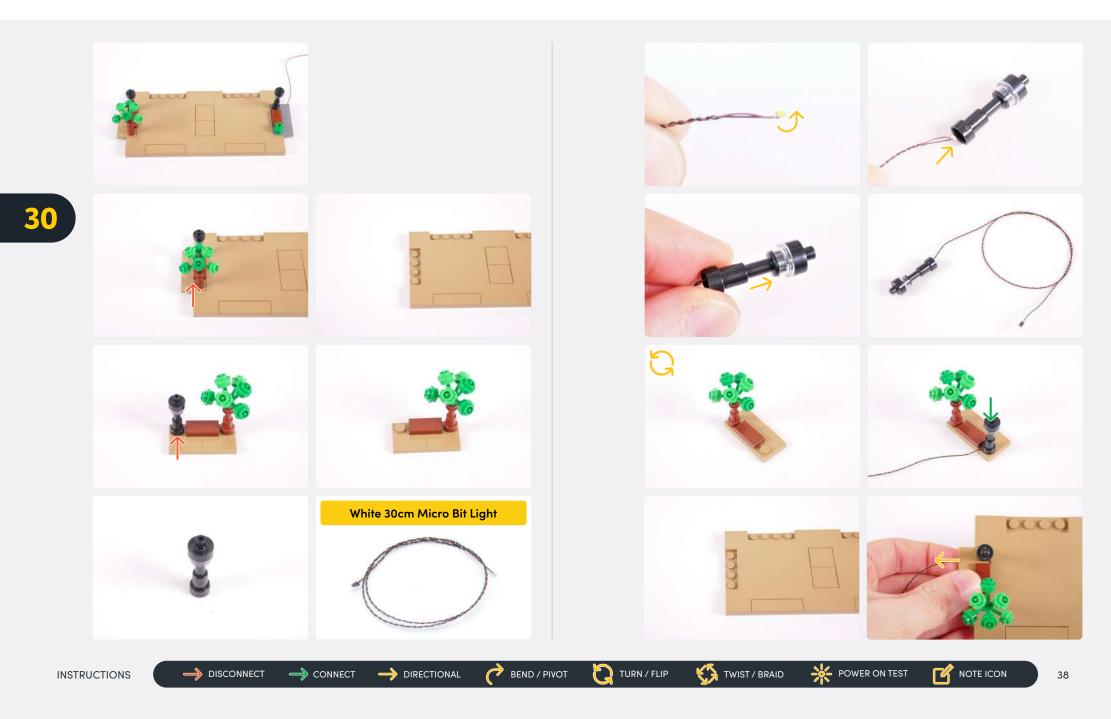




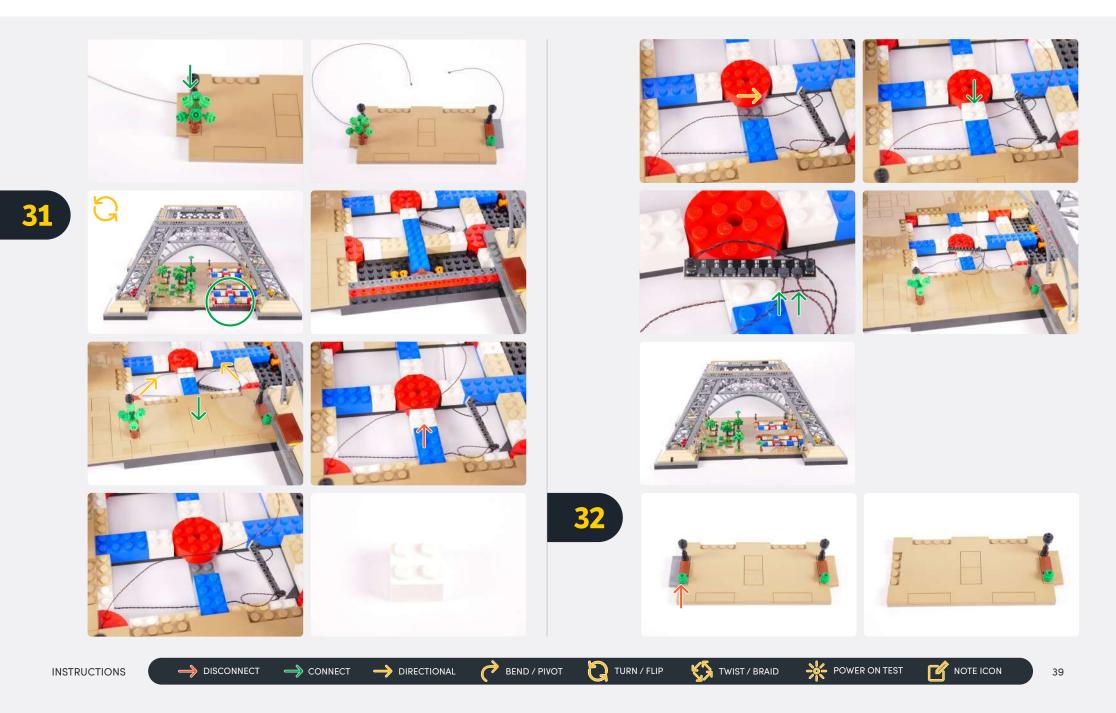




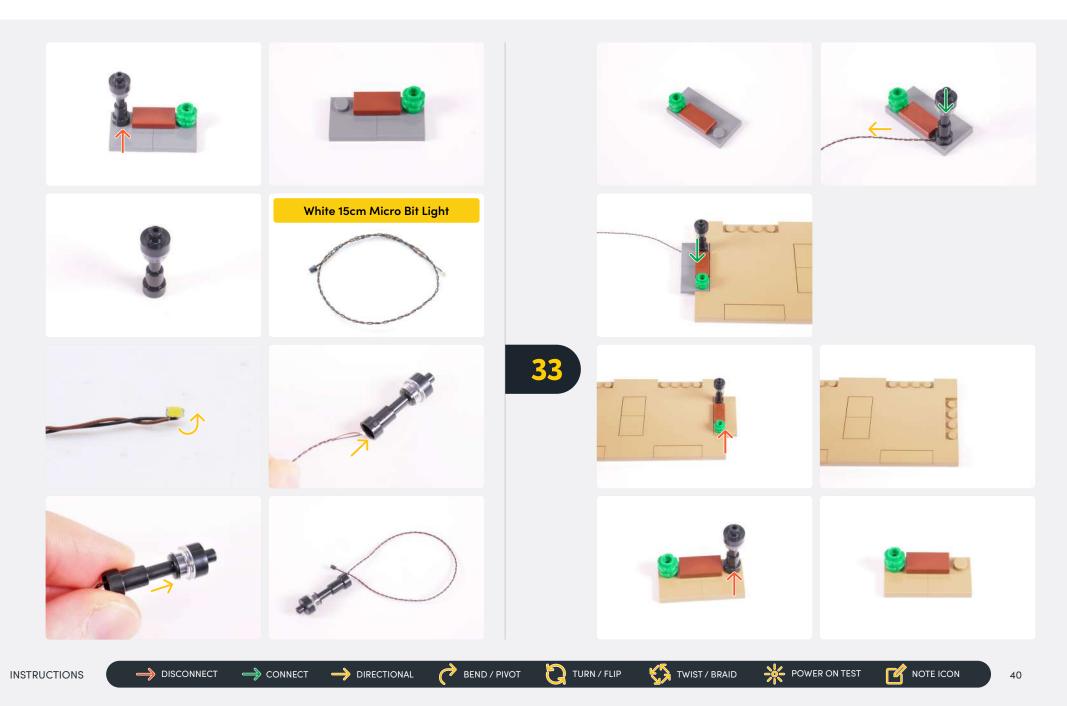




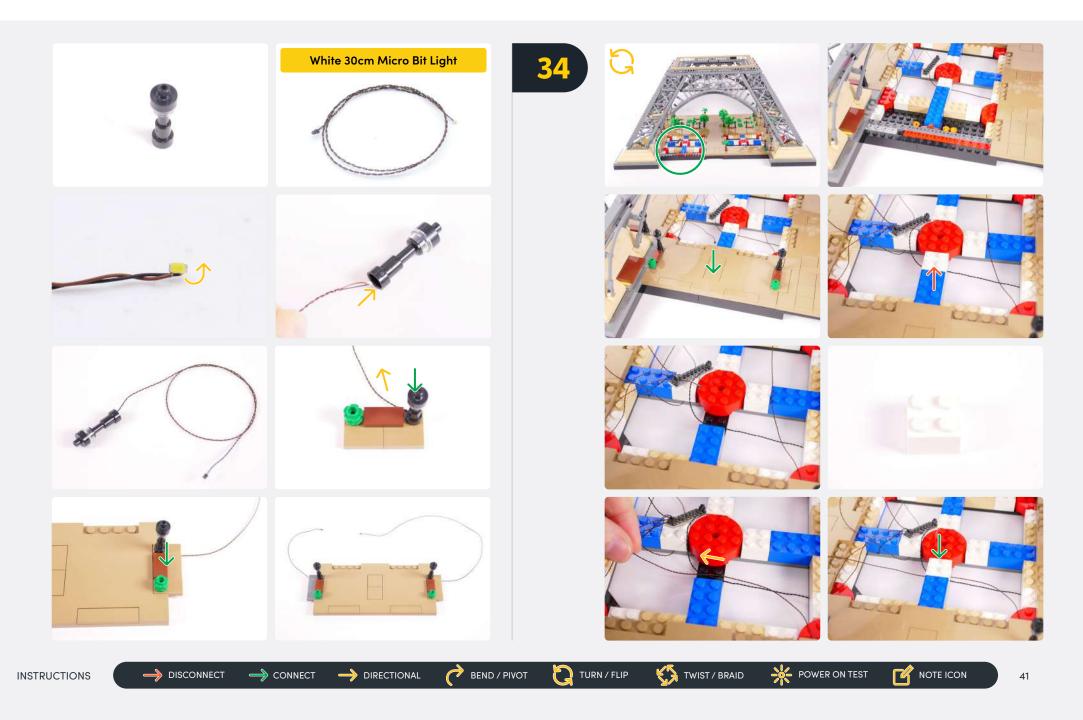




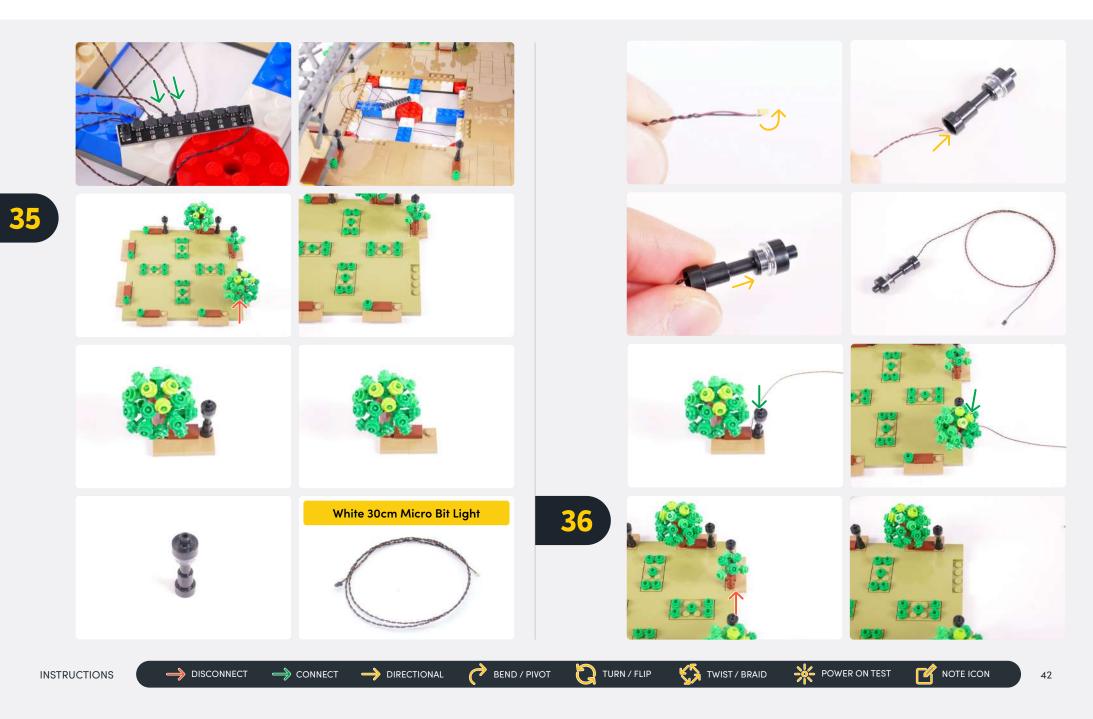




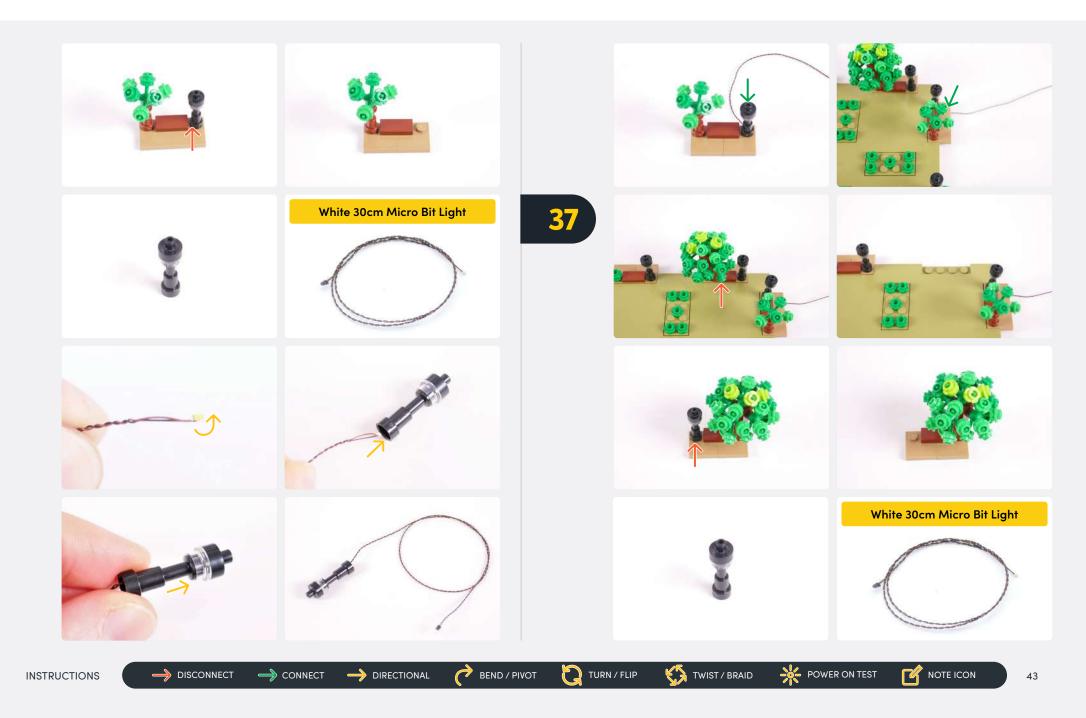




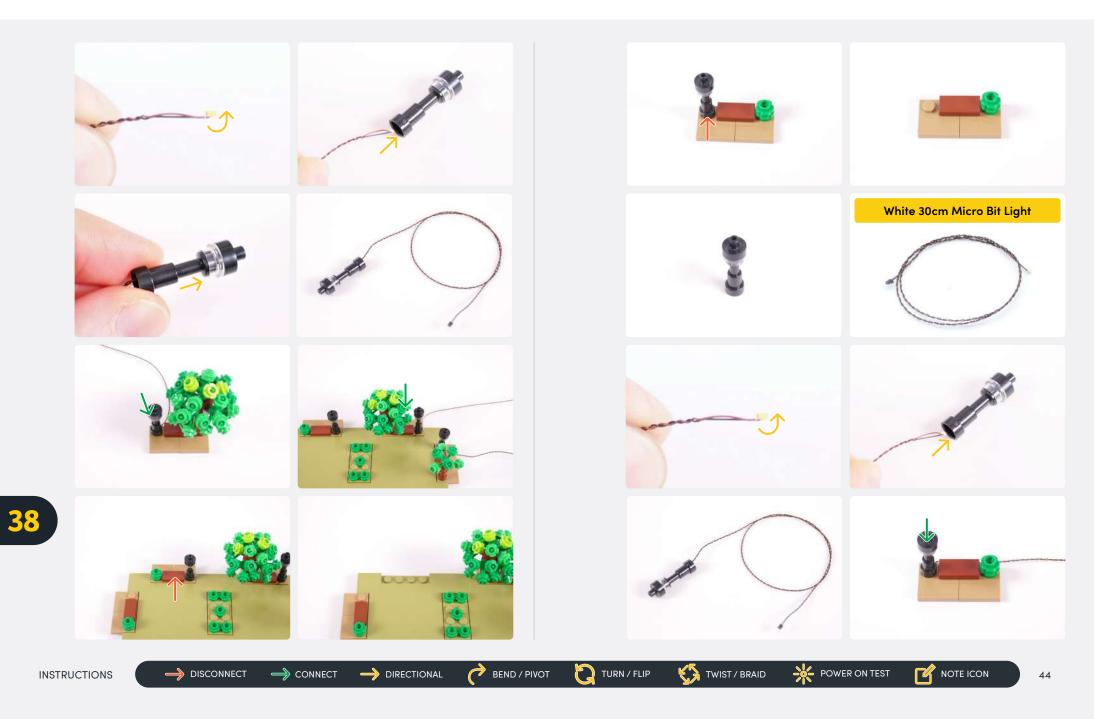




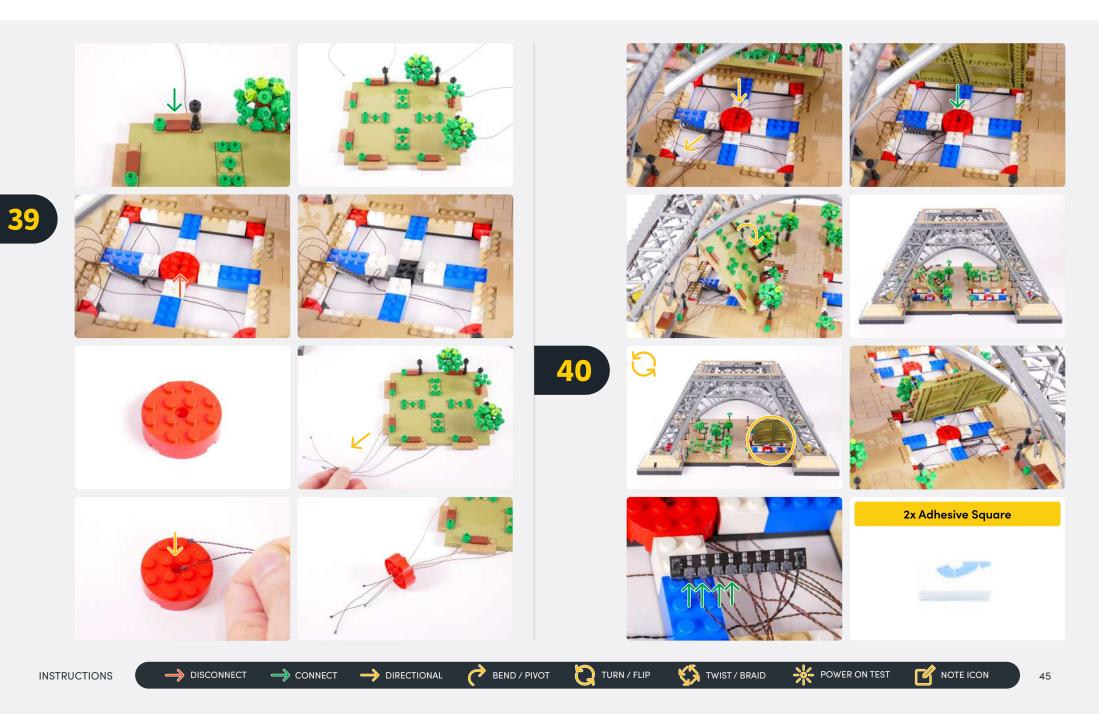




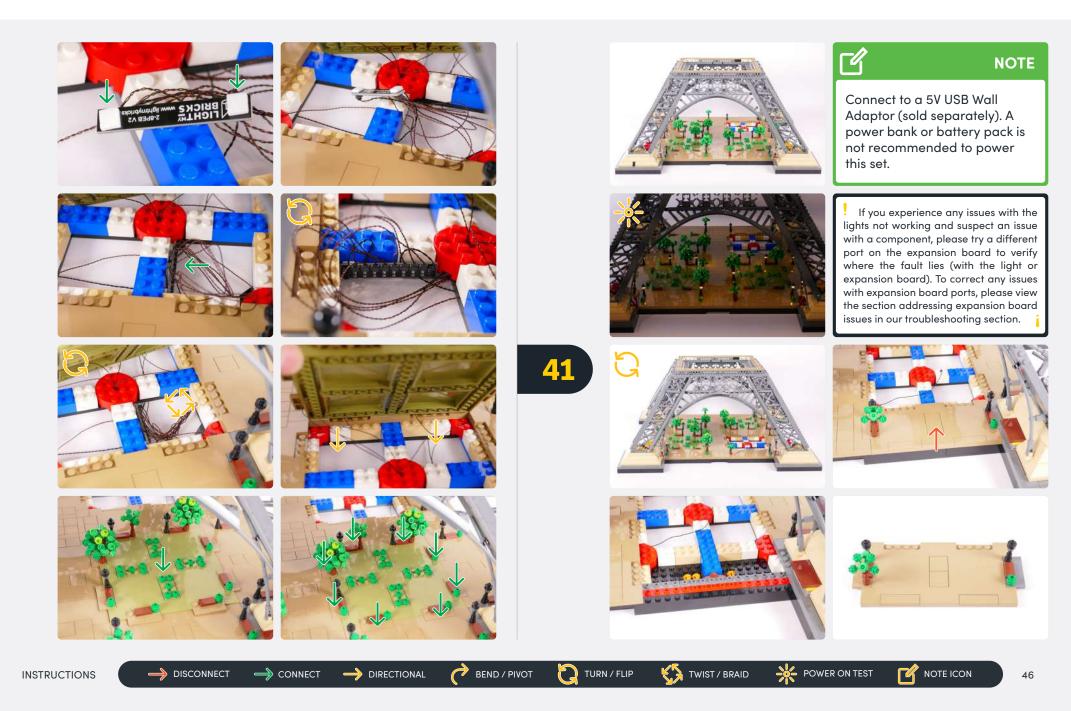



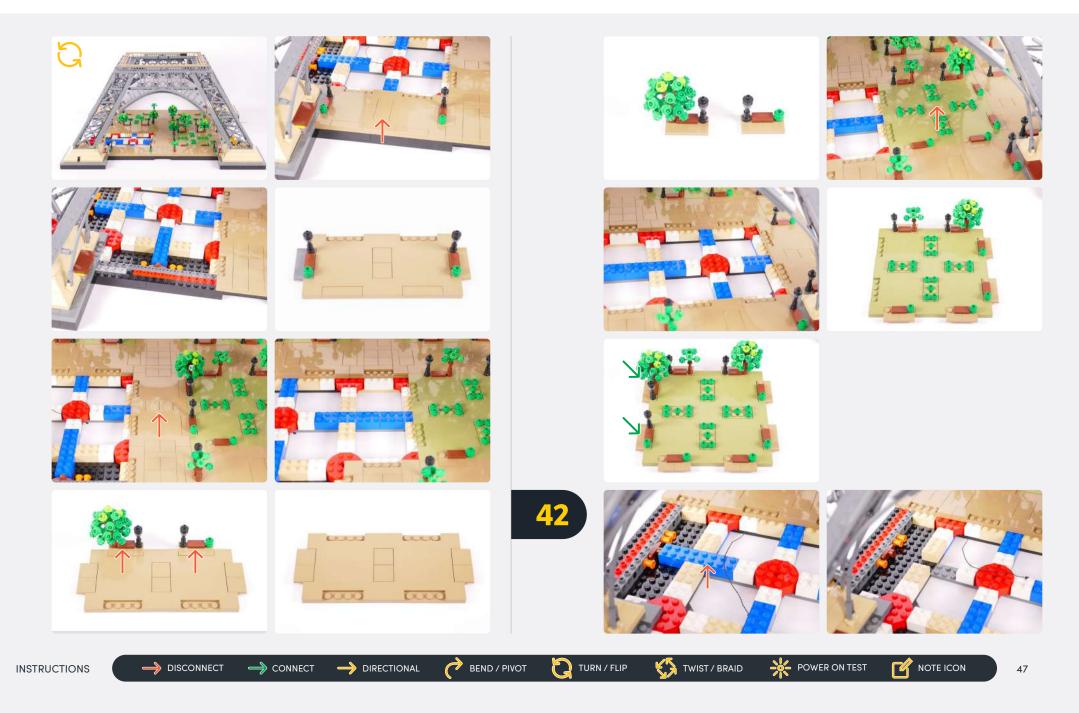




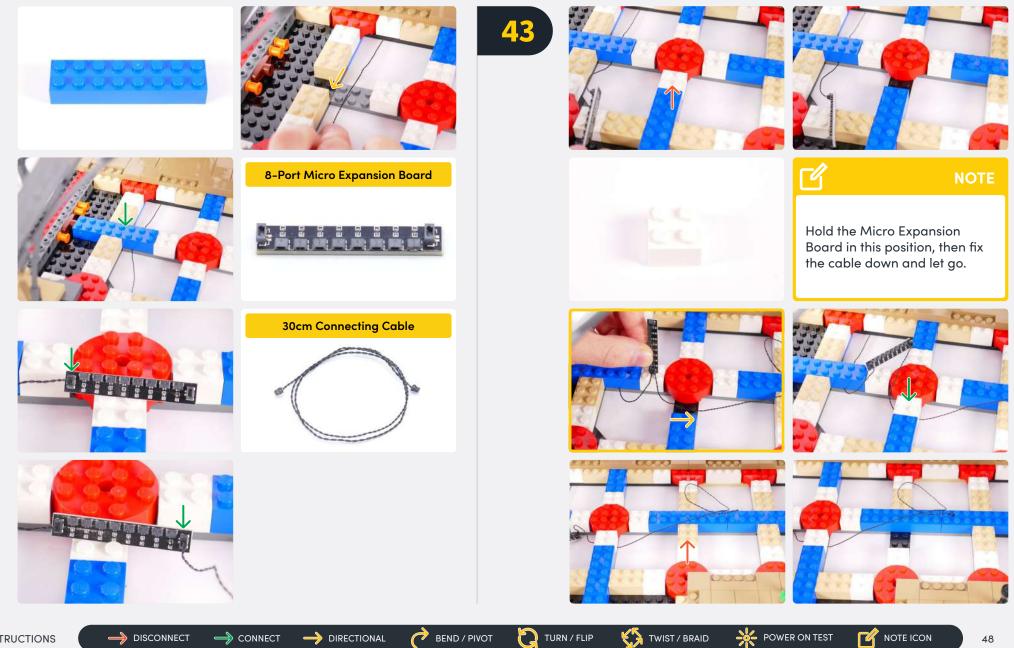


BEND / PIVOT

TURN / FLIP




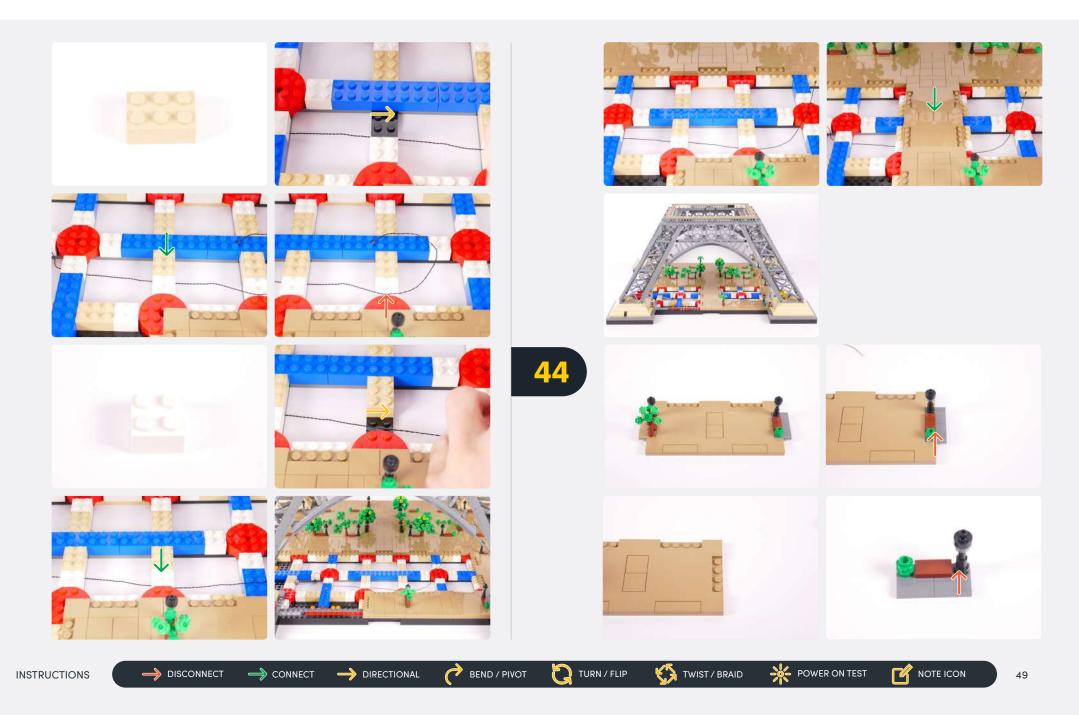



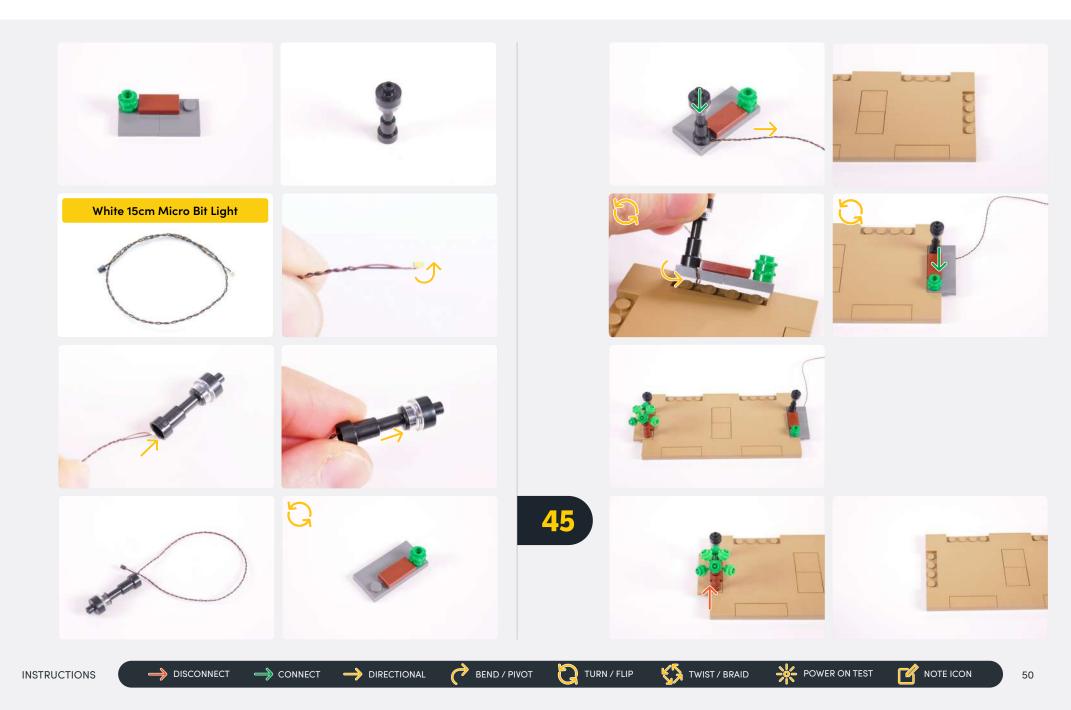




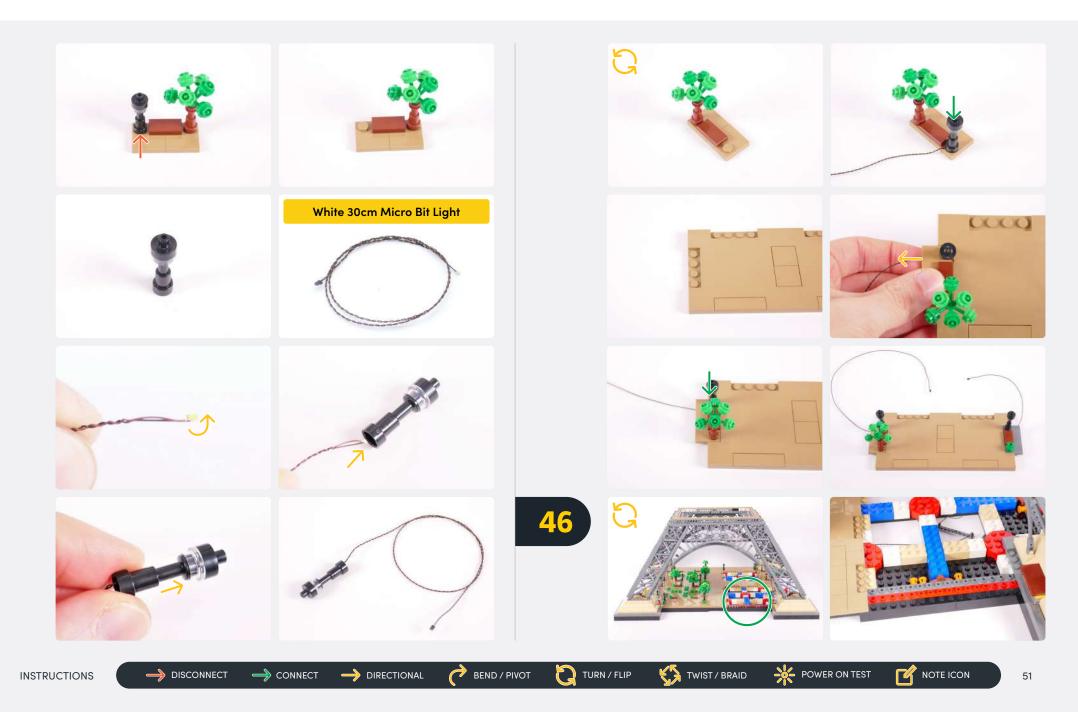







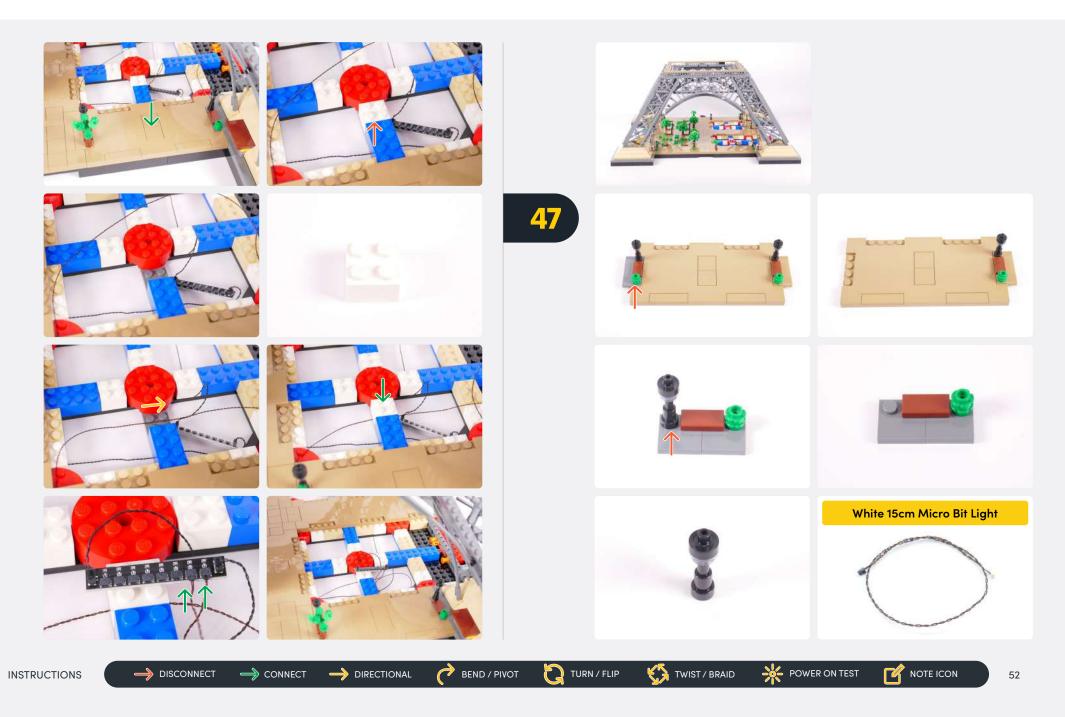




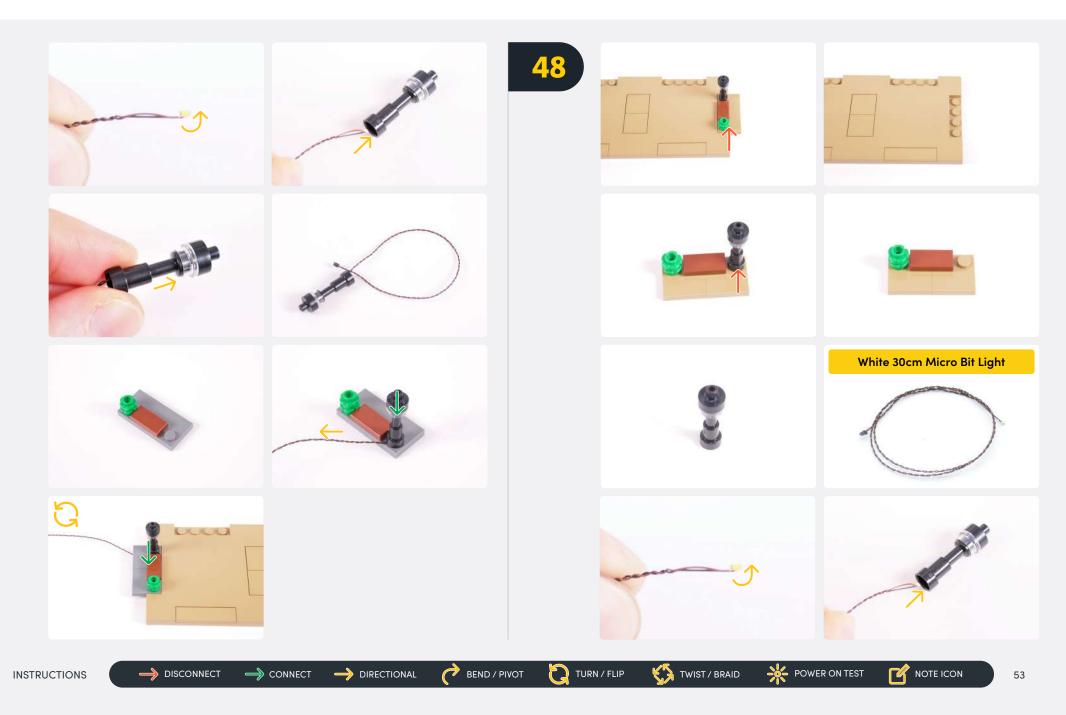




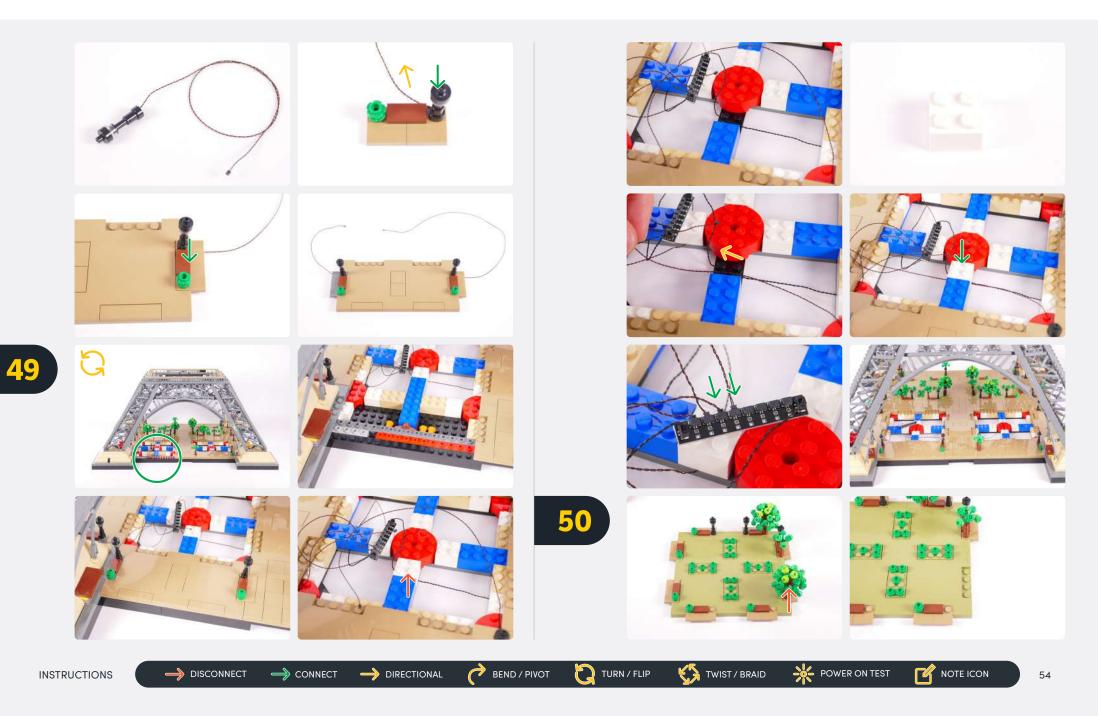



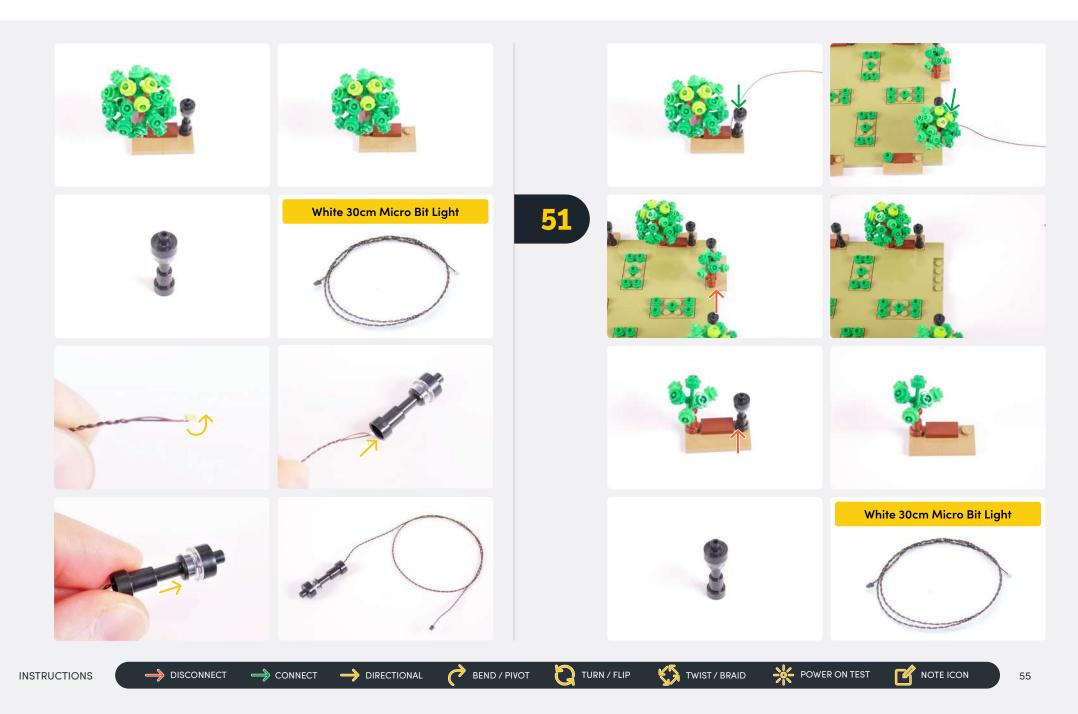




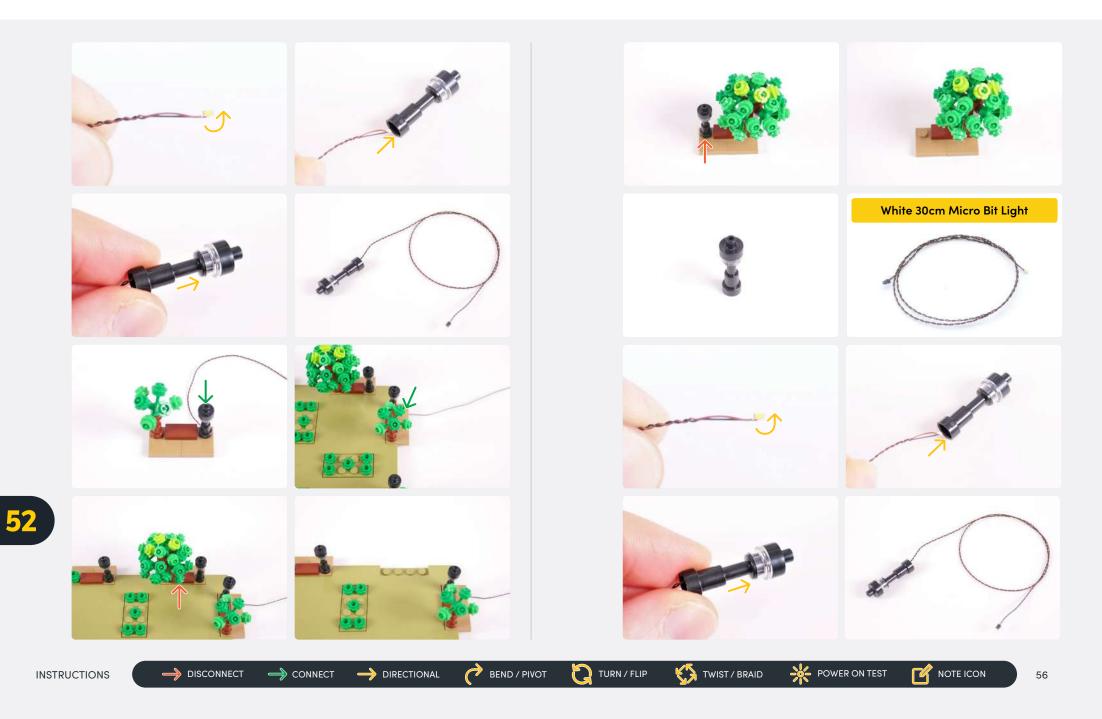






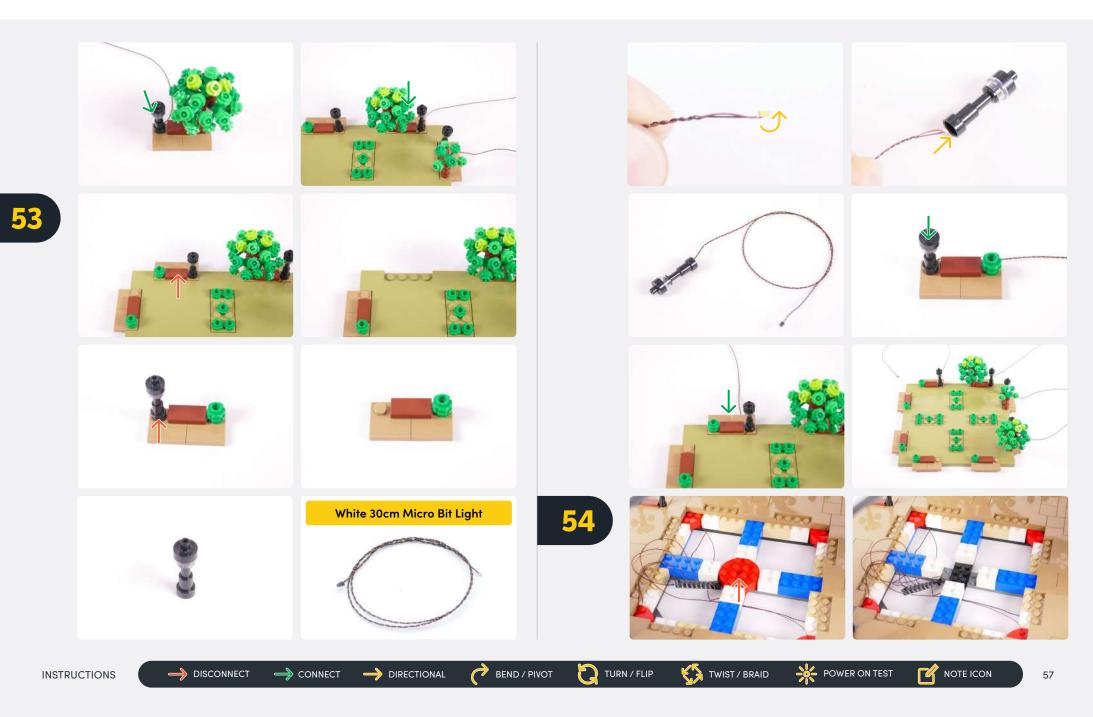



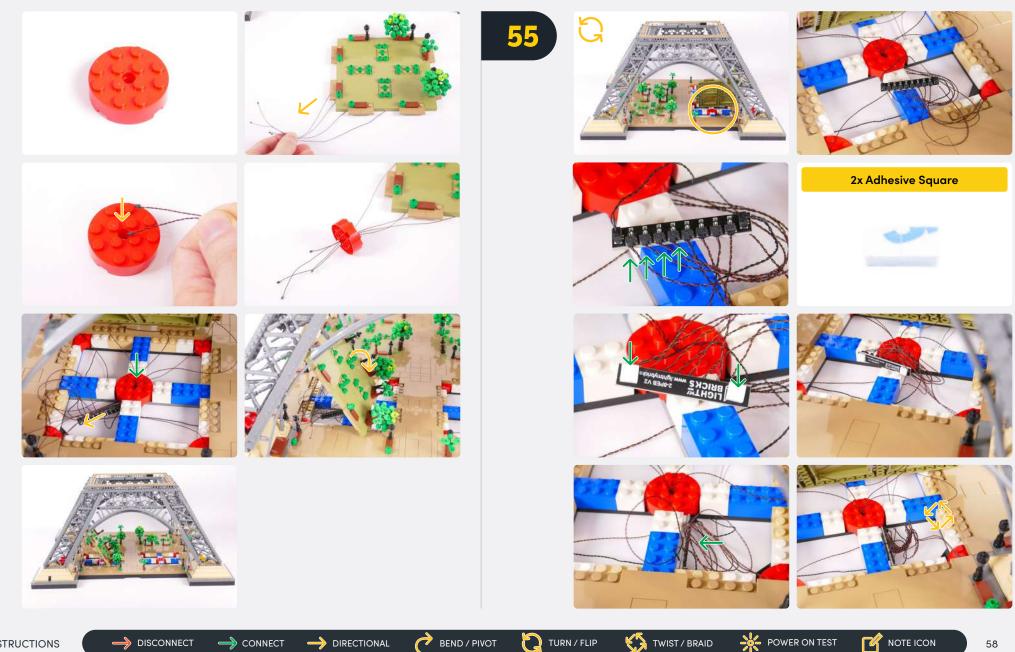

TURN / FLIP








Connect to a 5V USB Wall Adaptor (sold separately). A power bank or battery pack is not recommended to power this set.


If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section.



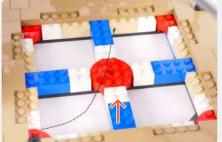






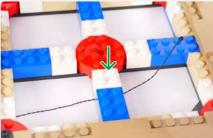


8-Port Micro Expansion Board





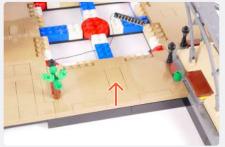

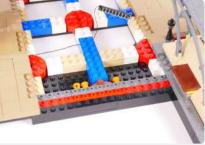

INSTRUCTIONS


-> DIRECTIONAL BEND / PIVOT

· 🔁 TURN / FLIP


TWIST / BRAID

POWER ON TEST




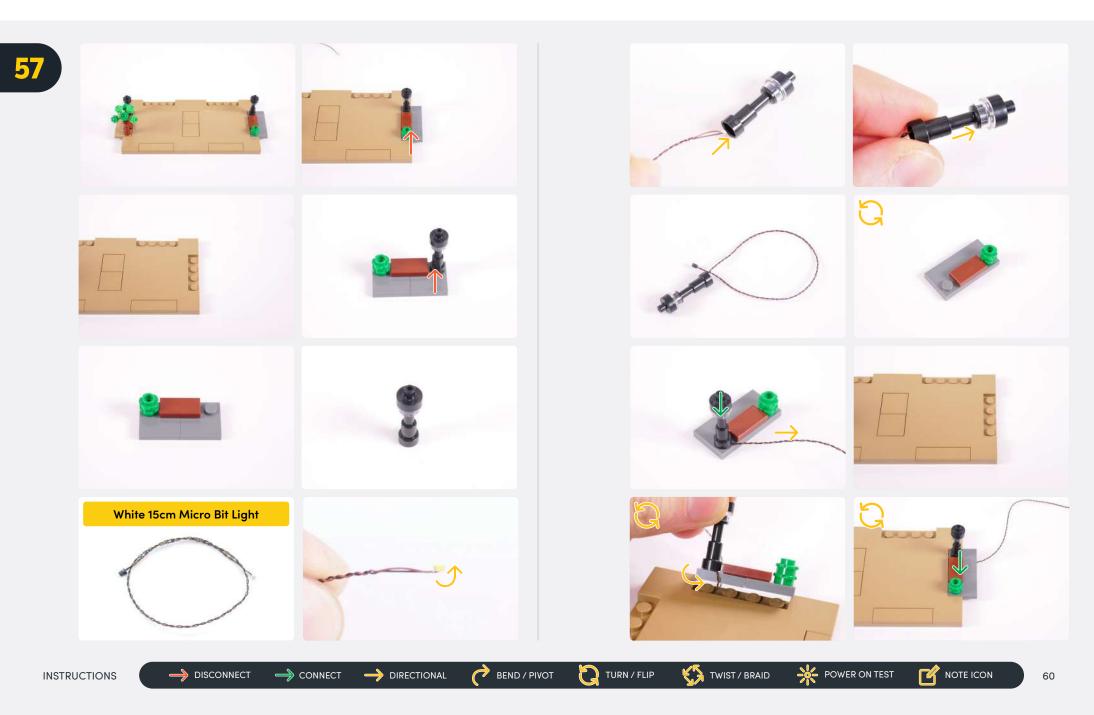




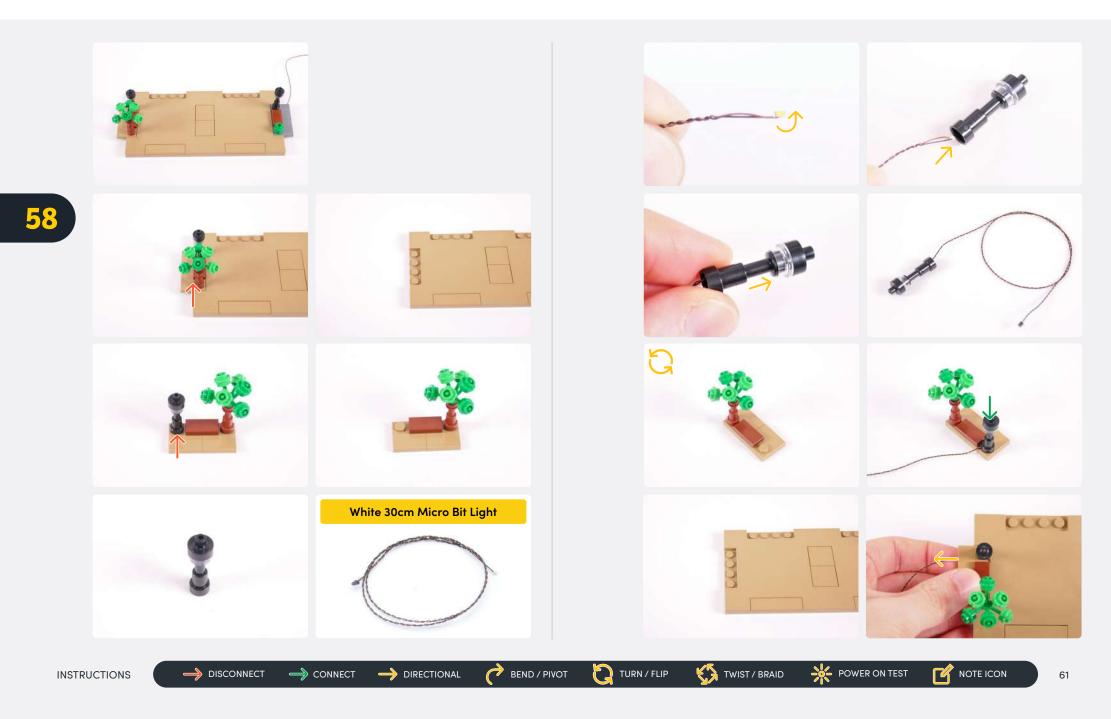




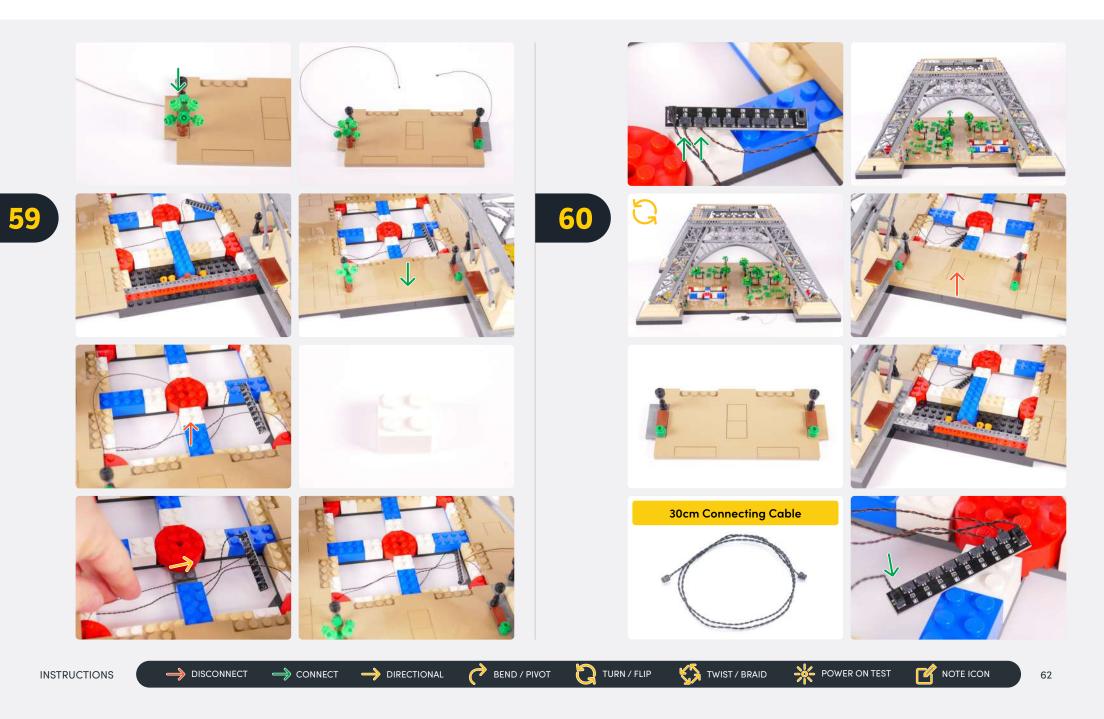



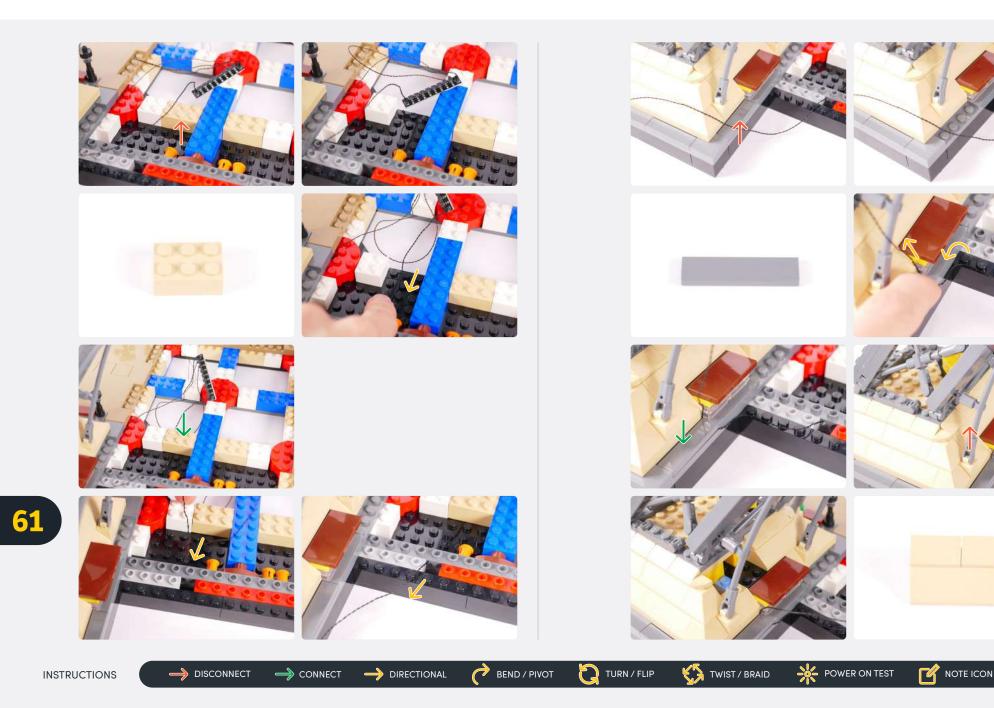




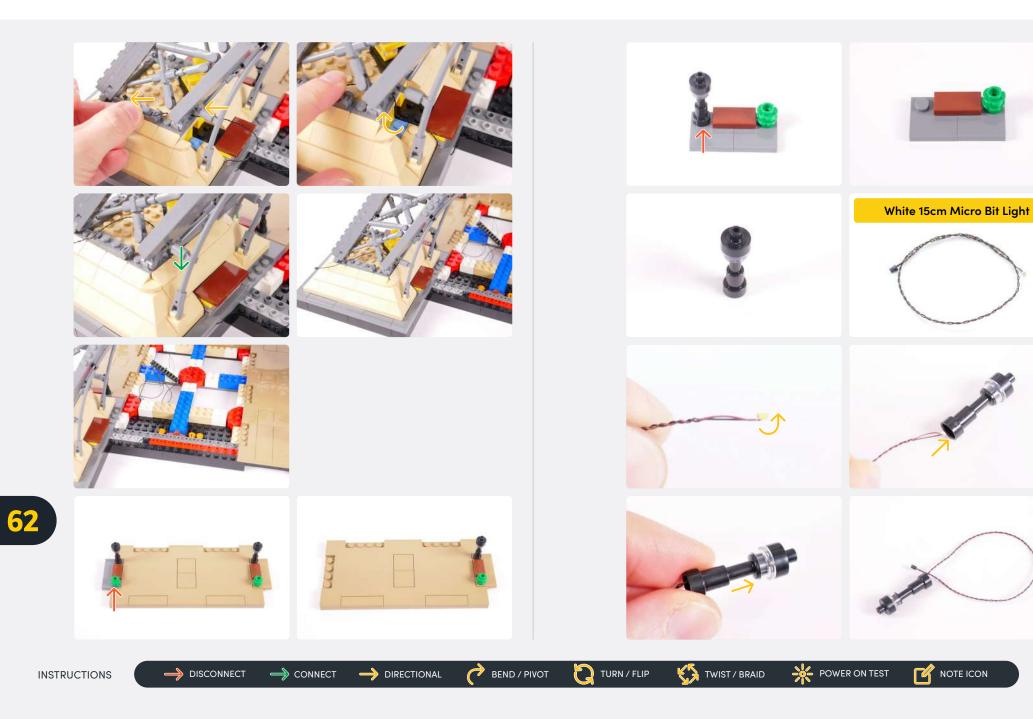


NOTE ICON




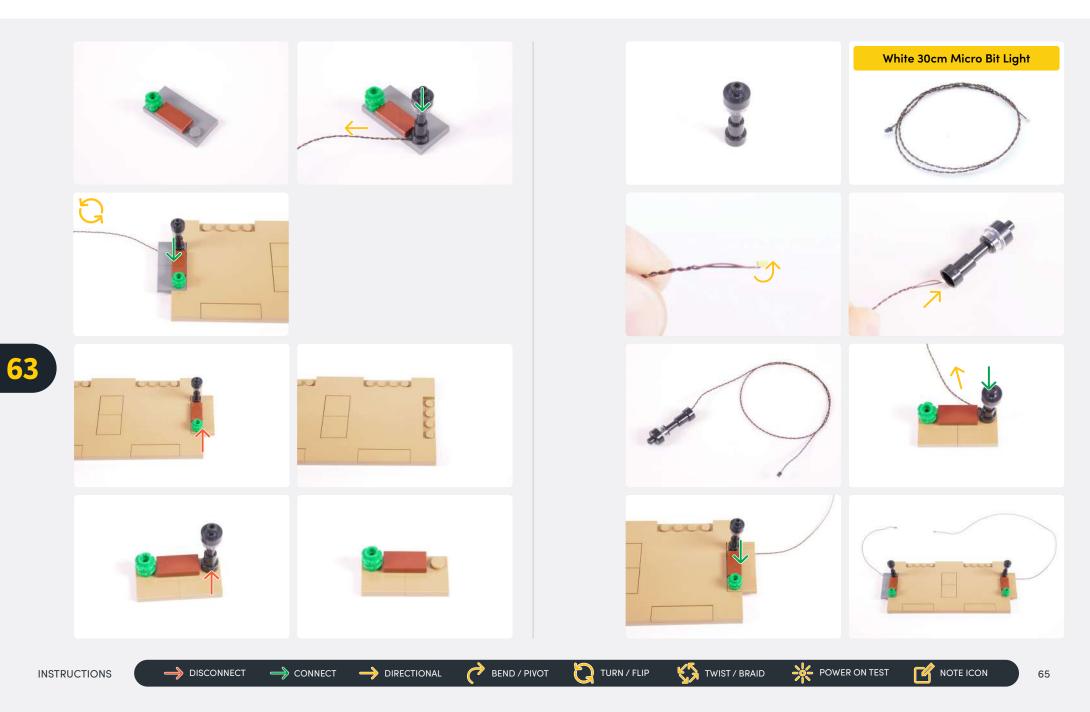




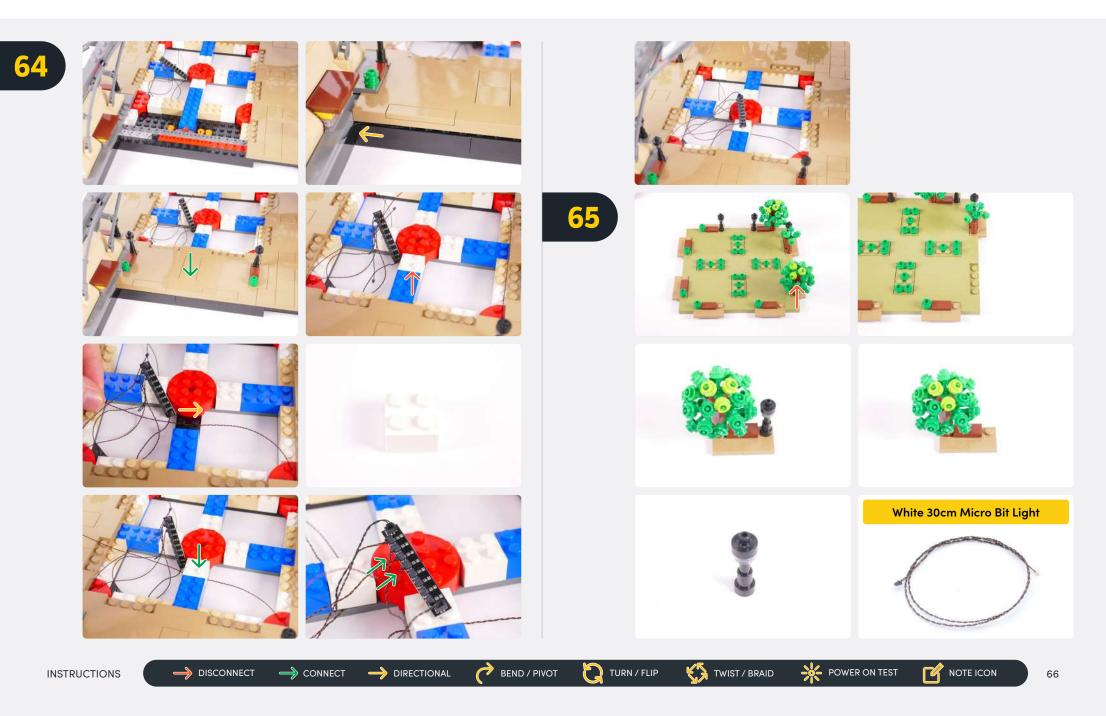




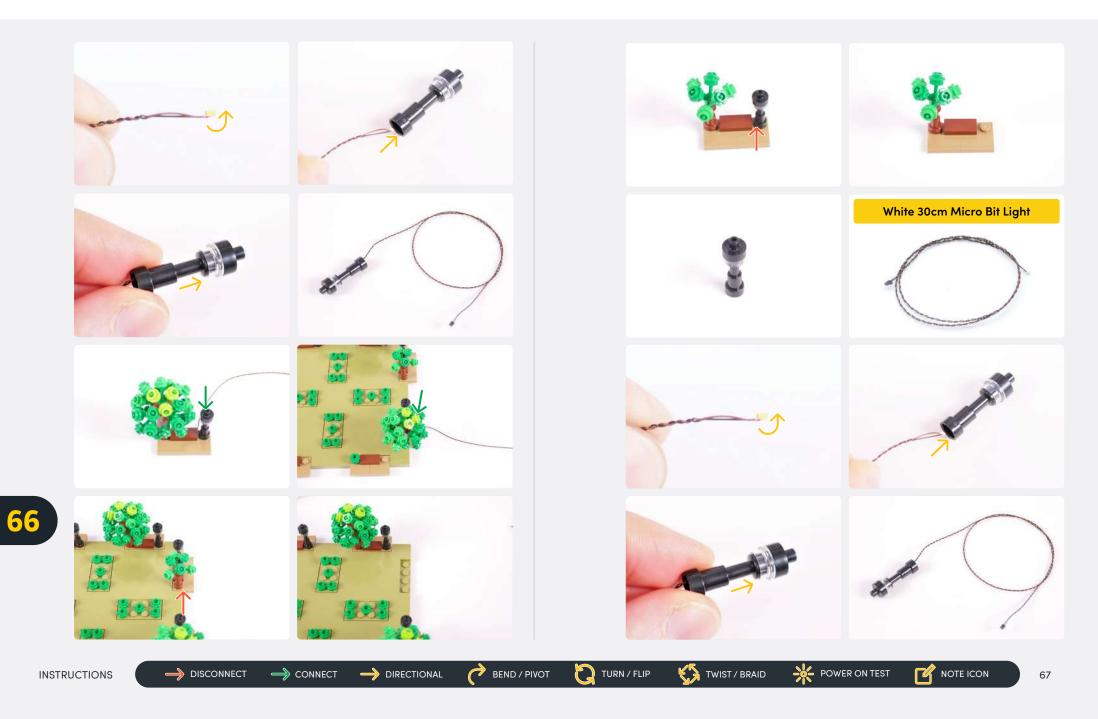




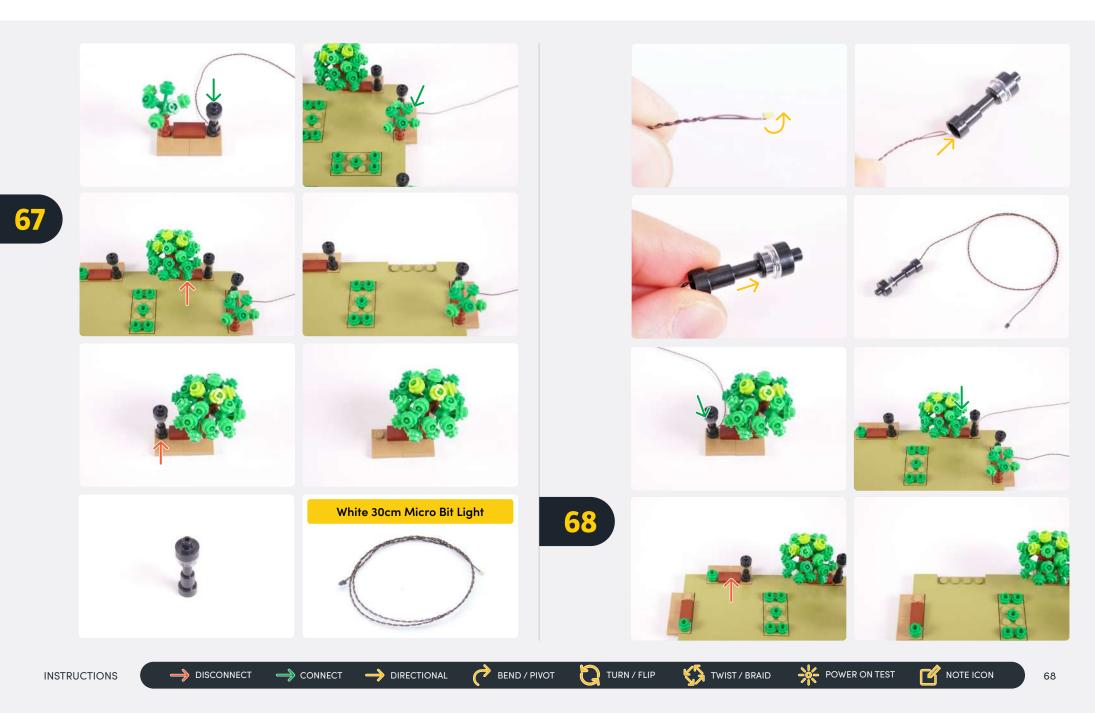



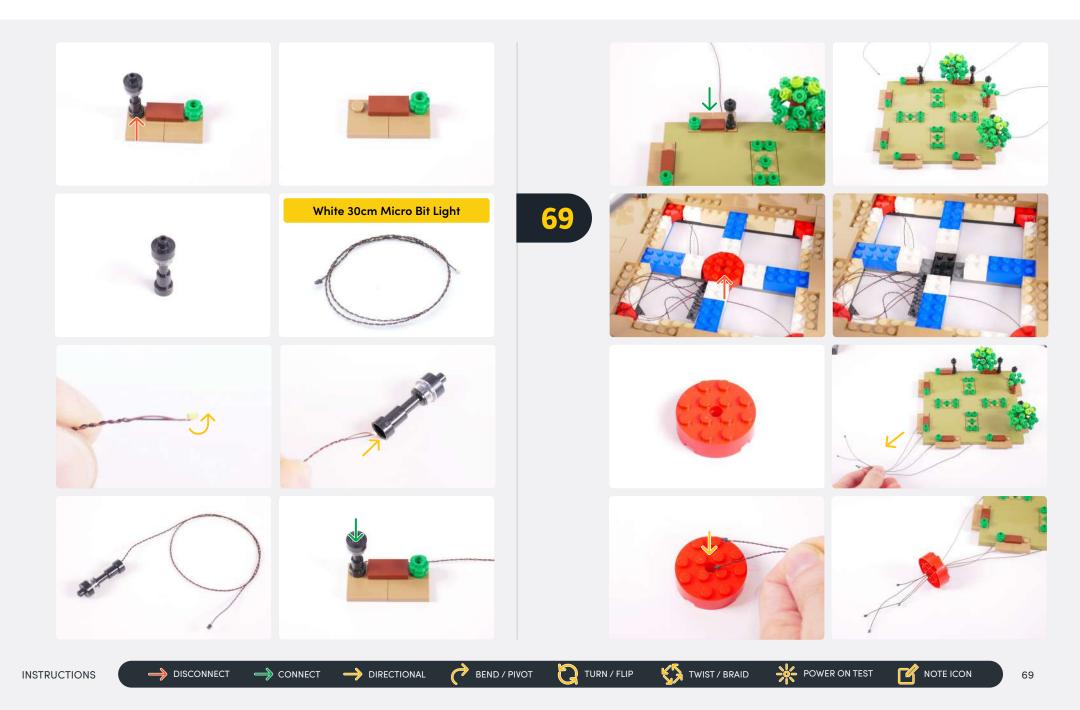





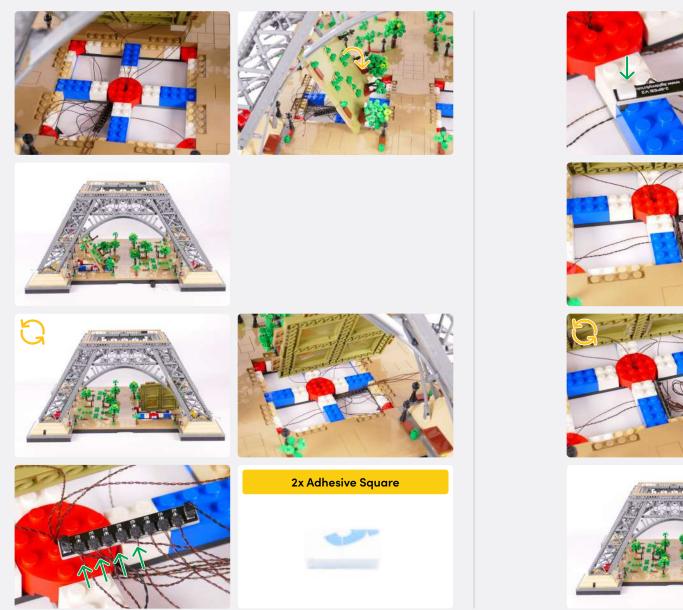


BEND / PIVOT

TURN / FLIP

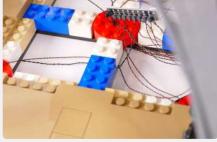

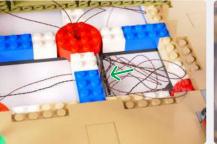

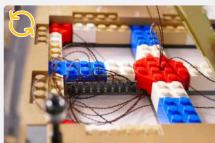







TWIST / BRAID

POWER ON TEST



NOTE ICON

INSTRUCTIONS

70



Connect to a 5V USB Wall Adaptor (sold separately). A power bank or battery pack is not recommended to power this set.


NOTE






If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section.

 
71

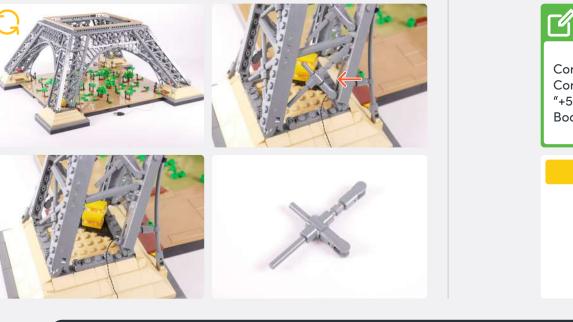

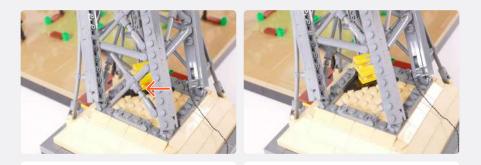








Connect the loose 30cm Connecting Cable into the

"+5V" port of the IR Switch Board.

50cm Connecting Cable



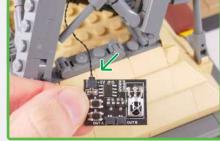

NOTE

Connect a 50cm Connecting Cable into the "OUT A" port of the IR Switch Board.


-> DIRECTIONAL OBEND / PIVOT

T 门 TURN/FLIP








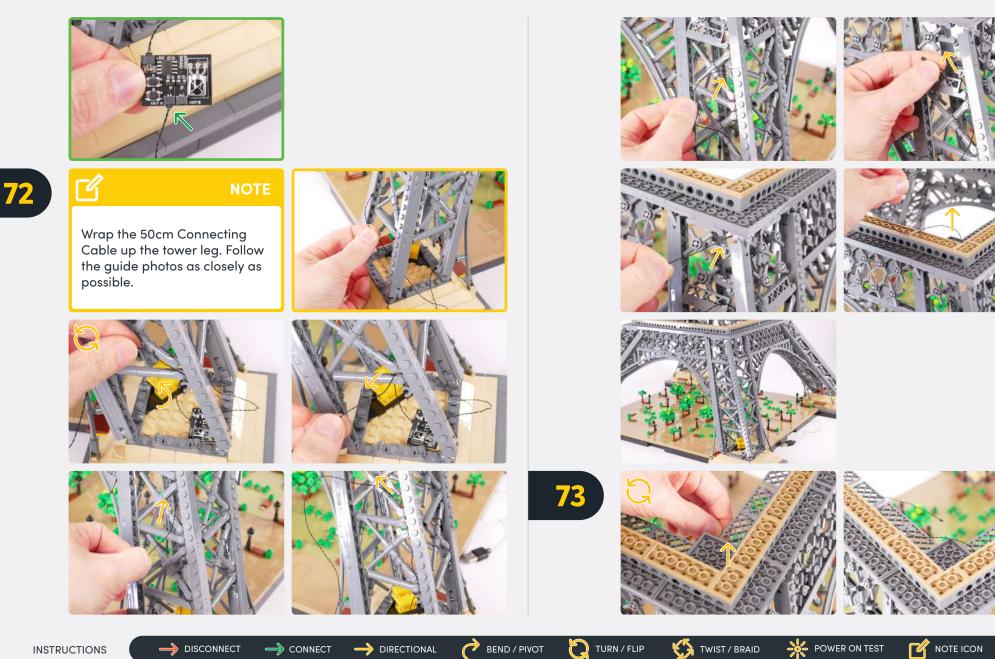




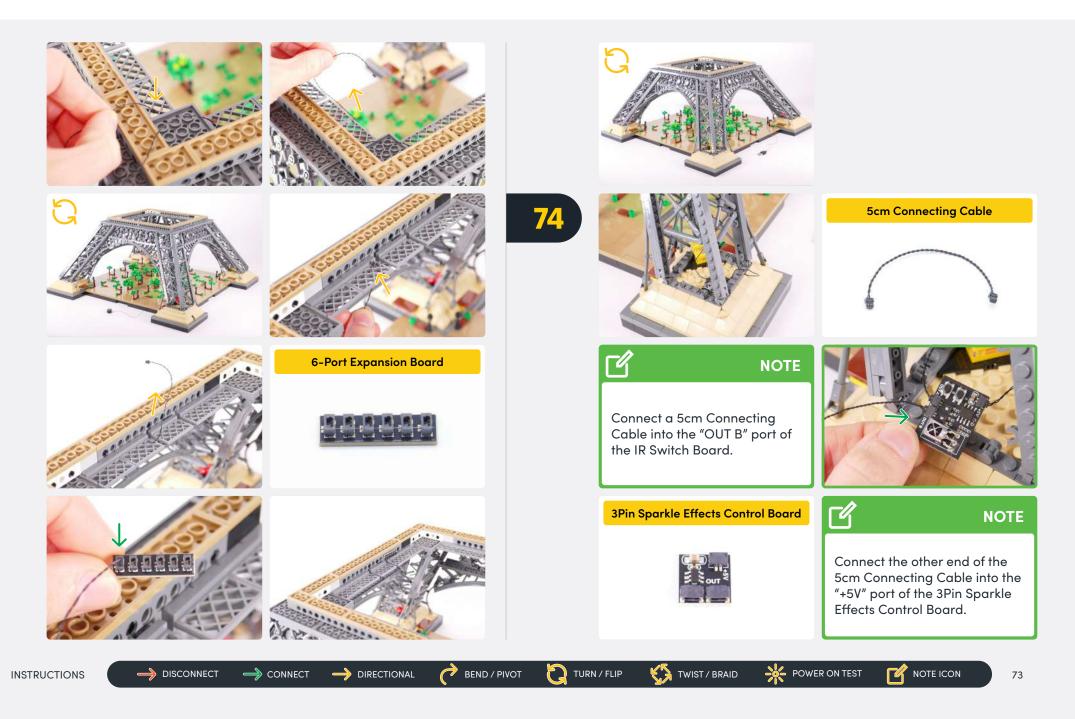








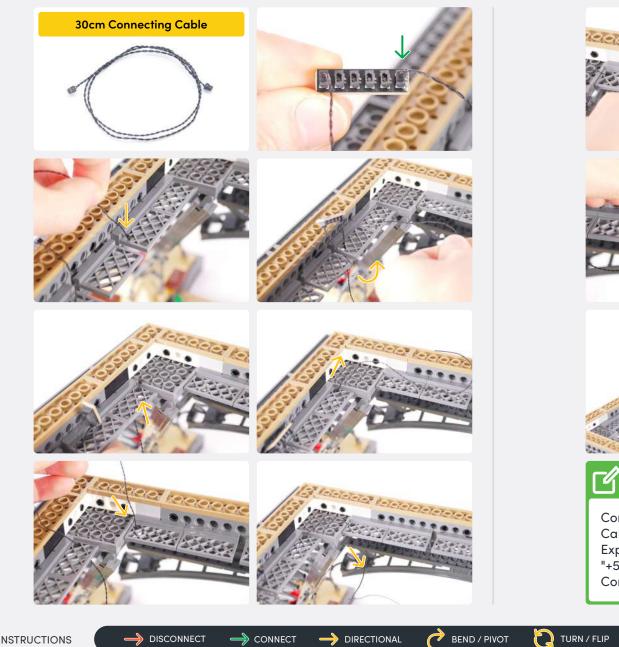

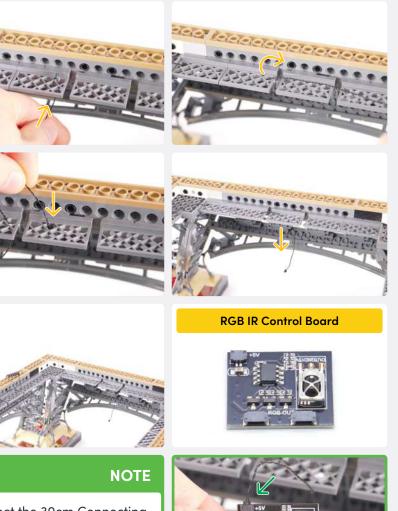


POWER ON TEST

Connect the 30cm Connecting Cable from the 6-Port Expansion Board into the "+5V" port of the RGB IR Control Board.


TWIST / BRAID

INSTRUCTIONS




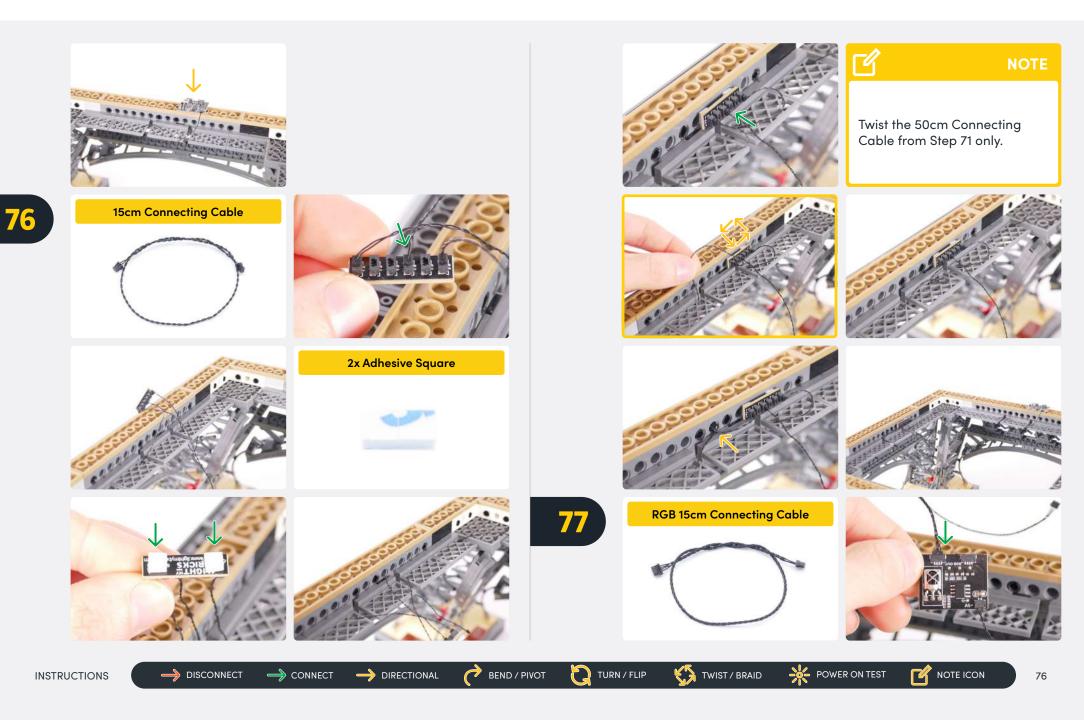




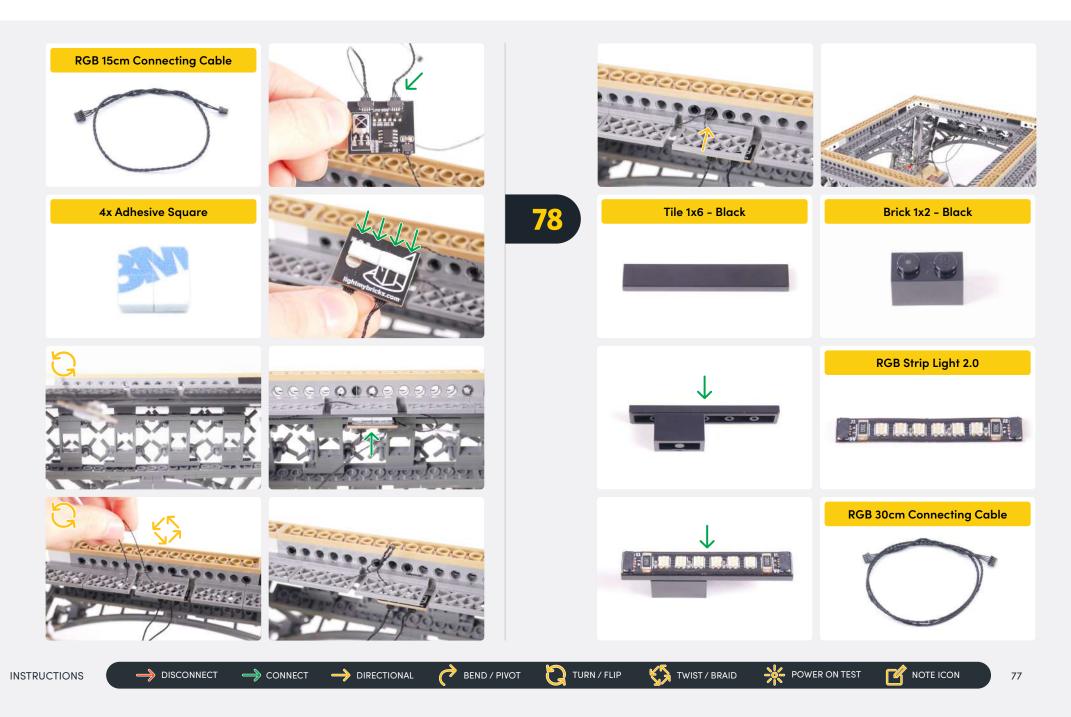




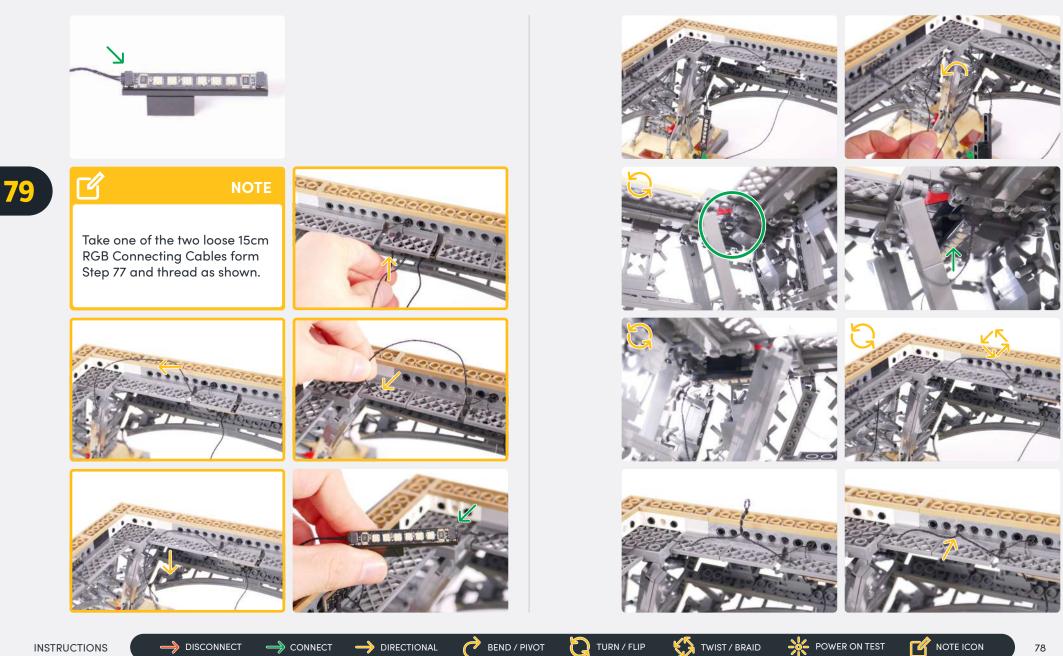




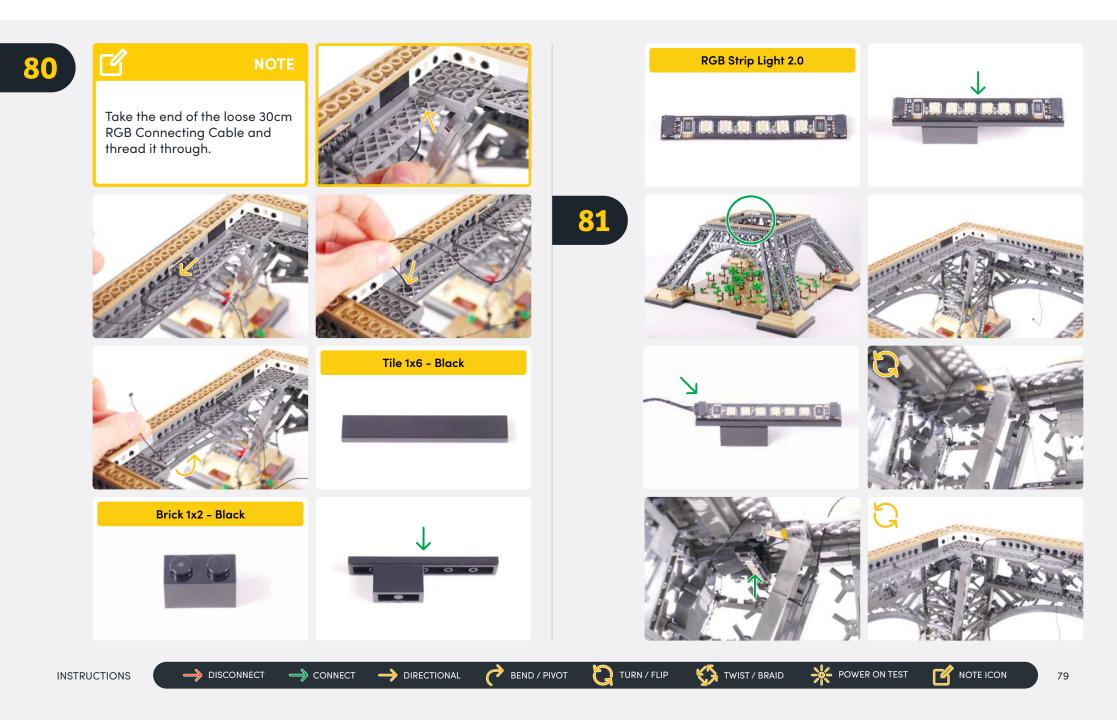




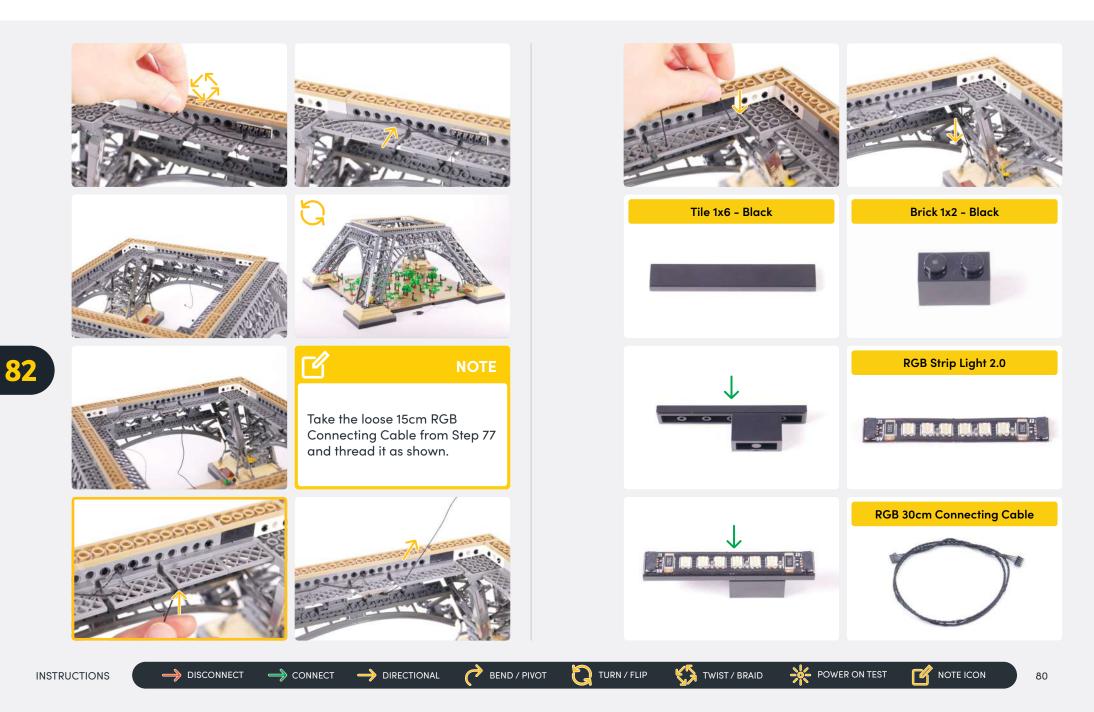



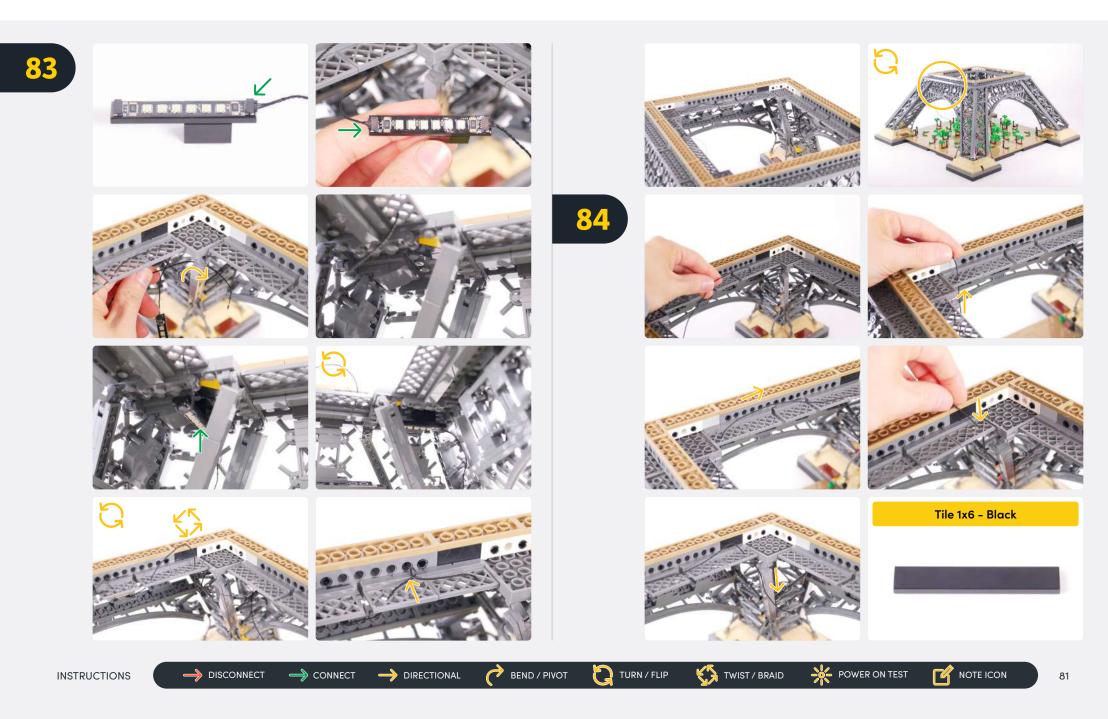




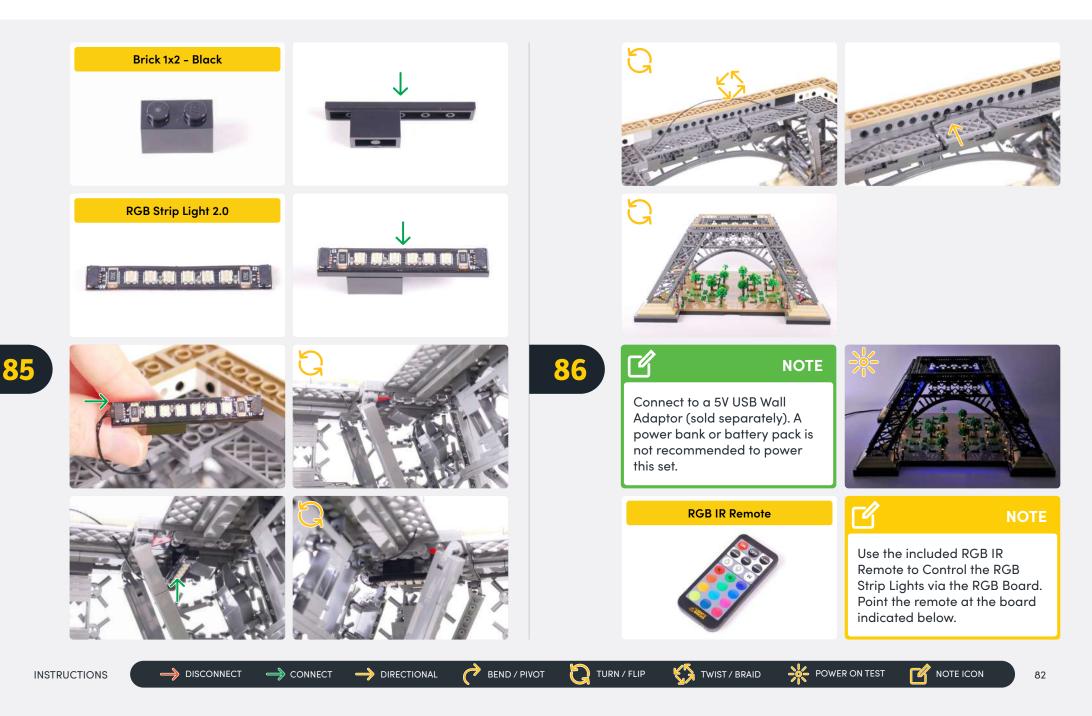





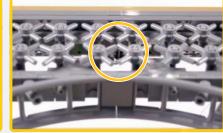

NOTE

Press the R, G, and B buttons on the Remote to change the Strip Lights to Red, Green, and Blue to test if they are working.





If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section.




<mark>87</mark>)




Light String 15 LED 3Pin – Warm White





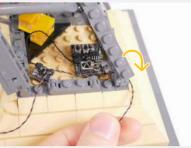

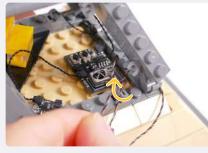


NOTE

POWER ON TEST

Connect the Light String 15 LED 3Pin to the "OUT" port of the 3Pin Sparkle Effects Control Board.




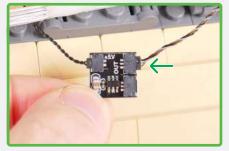

DNAL BEND / PIVOT


DT 门 TURN / FLIP



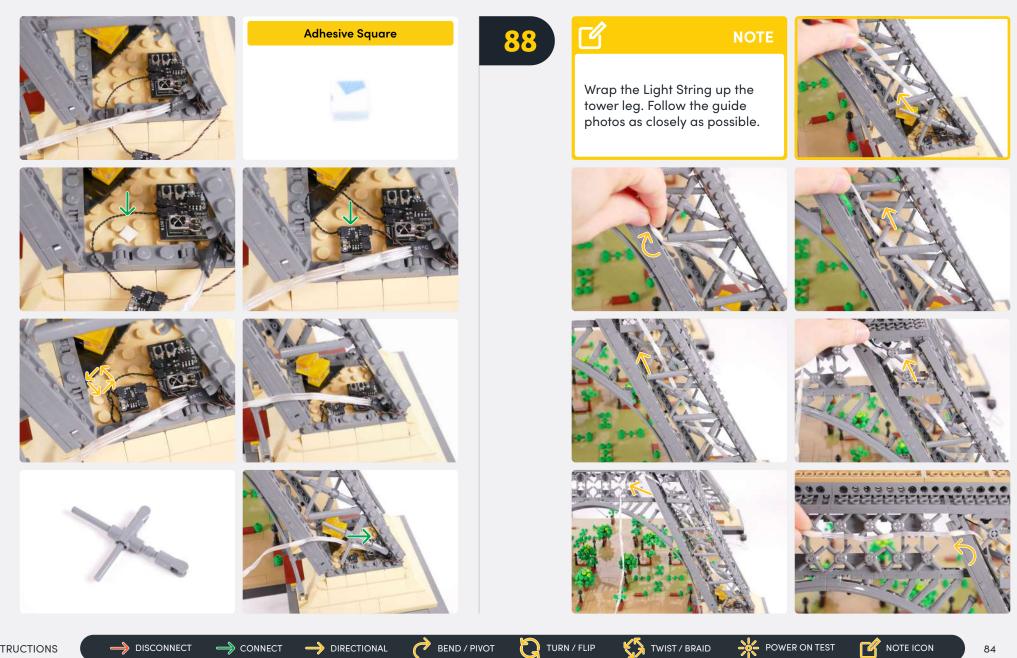

INSTRUCTIONS



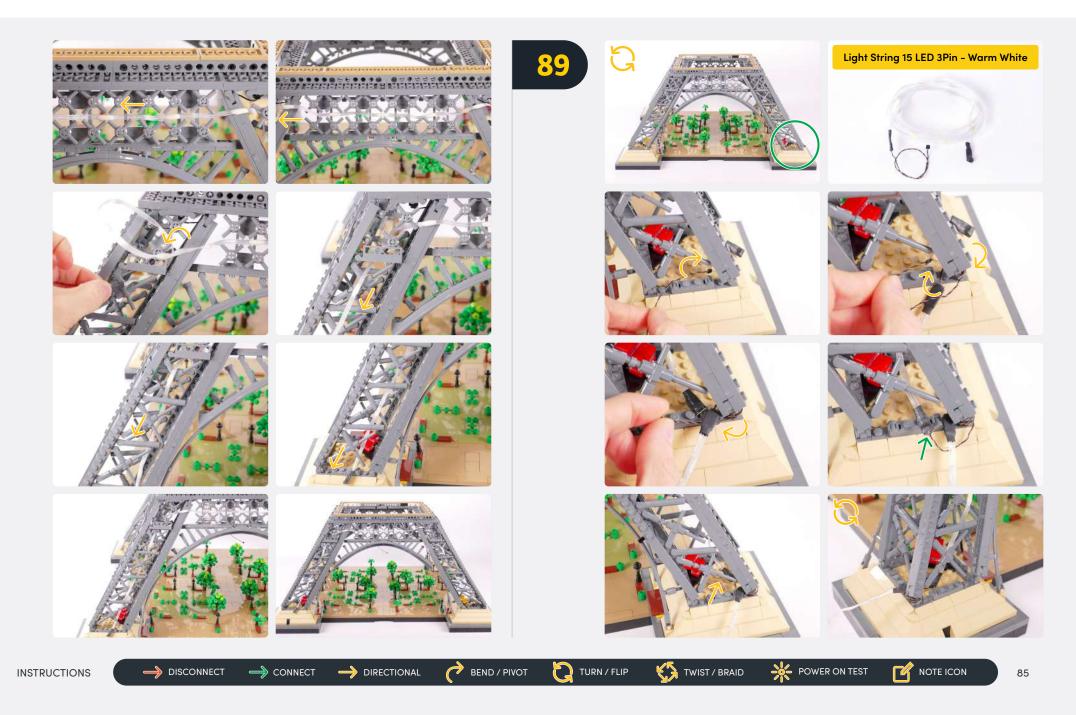


















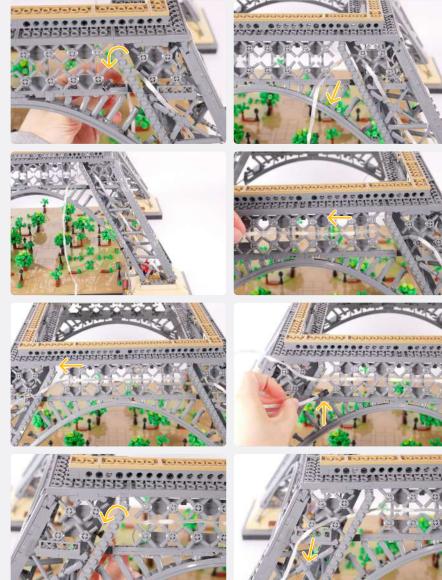





TURN / FLIP

POWER ON TEST









 













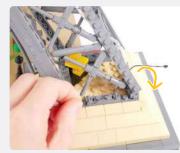










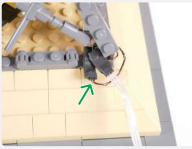






INSTRUCTIONS


BEND / PIVOT


POWER ON TEST



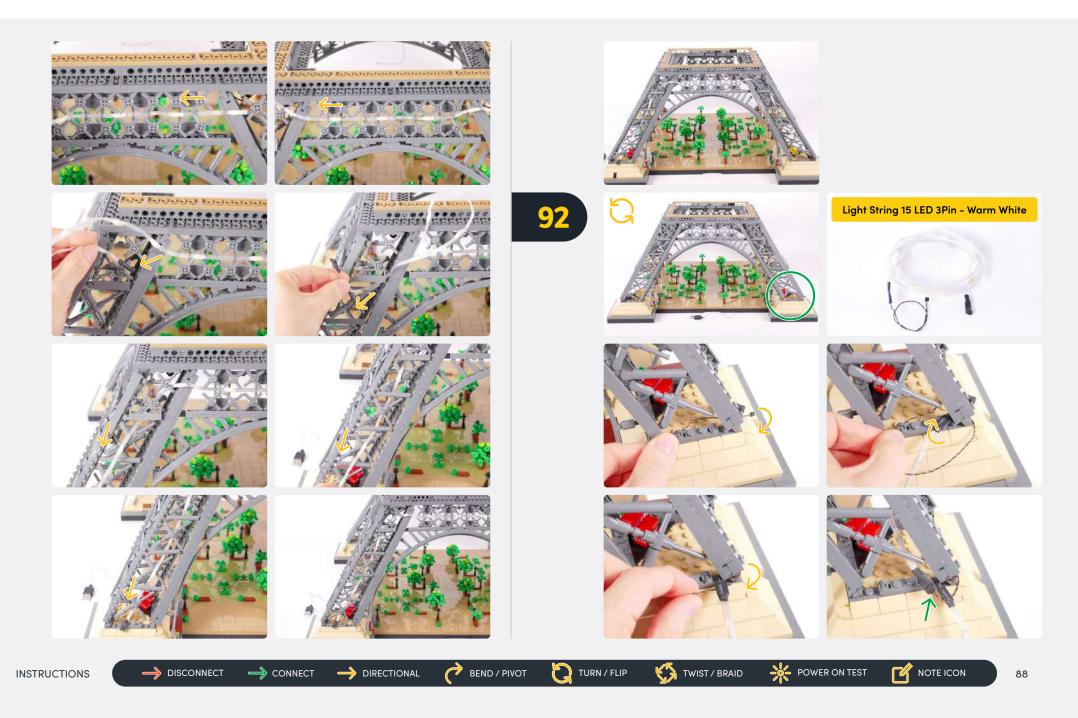



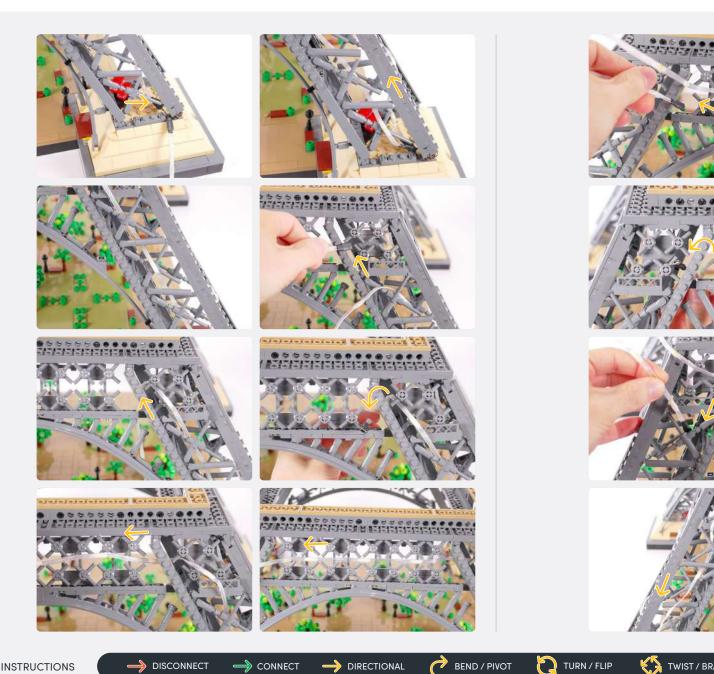

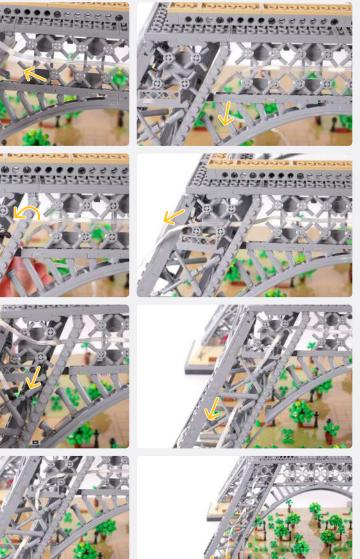

POWER ON TEST



Leave the end of the String Light loose for now. It will be connected to the second level of the Eiffel Tower when it is completed later.		After 30 seconds the String Lights flash rapidly for 30 seconds then back to static. Avoid staring at the effect as it may cause discomfort to some
	You should have these parts left over that were removed from the LEGO set so far.	Removed Pieces
NOTE Connect to a 5V USB Wall Adaptor (sold separately). A power bank or battery pack is not recommended to power this set.	If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section.	
Use the RGB Remote to switch between the RGB Mode and Sparkle Mode with the ON and OFF buttons. Point it at the IR Switch Board when pressing.	NOTE This concludes Part 1 of the Eiffel Tower Guide. To continue, please click the box to download Part 2.	click m ^{e!} Part 2 Links to instructions portal page





TROUBLESHOOTING

Light My Bricks lighting kits contain individual components that are very small and can be easily damaged if not handled correctly.

To prevent unnecessary damage to components, we highly recommend that the User Guide section, **"Important things to note"** is read carefully. Follow the handling procedures in the User Guide to help prevent faults and damages to your Light My Bricks components. If you are experiencing issues with your Light My Bricks set, watch our troubleshooting video here or read on for a list of common causes to help you troubleshoot.



Troubleshooting

Firstly, ensure that the batteries have power using a battery charge gauge.

If the batteries have no power, replace the batteries.

If the batteries still have power, check to see if the batteries have been inserted correctly into the battery pack.

Check for AA batteries using the AA battery pack

Inside the battery pack are symbols indicating which direction the AA battery should be inserted. The flat side of the battery should be paired with the spring side of the battery pack.

If the batteries have been installed correctly and your kit still isn't operating correctly, the next step is to check the wiring.








Troubleshooting

Check Your Wires

In order for Light My Bricks components to fit in between and underneath LEGO® bricks, the components need to be very small. Due to this nature, Light My Bricks components can be easily damaged when not handled correctly.

Be careful when removing unpacked components out of the packaging and ensure not to forcibly pull at the wires as this can damage the soldering that attach the wires to the LEDs. If the wiring is detached from the LED itself, the light will not operate.

When connecting lights to your LEGO® set, check that there are no pinched wires underneath or in between bricks and plates. When the wires are pinched and the exposed wires are touching each other, this can cause a crosswire and the lights to not function correctly.

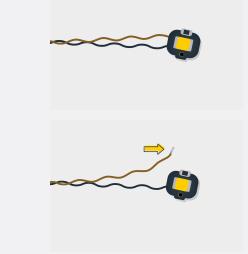



Troubleshooting

Check Your Expansion Board Ports/ Strip Light Ports / Effects Board Ports

It is important to note that connectors can only be inserted to the expansion board, strip light, or effects board ports in one direction.

Forcibly inserting connectors in the incorrect direction will result in damaging the pins inside each of the ports on your component board.

Not only will a light connected to the damaged port not work, but if the pins inside the port are bent to a point they are touching each other, this can result in all other lights in the system to stop working. This is a short circuit.





A short circuit can also result in overheating of the board, cable or batteries. If you suspect a short circuit, DISCONNECT POWER IMMEDIATELY Batteries can fail, catch fire, or even explode if left connected to a short circuit for too long.

If you suspect you have a faulty component due to a bent pin, try the following steps:

If you look carefully inside each of the ports, each port contains 2 small pins that should be straight. You will be able to identify a faulty port if it has any bent pins.











CONTACT US

If you have an enquiry regarding the online shop, our products or a general enquiry please refer to our Frequently Asked Questions webpage here. Alternatively, you can contact our Customer Services team by visiting our online support portal here.

support.lightmybricks.com

We thank you for purchasing this product and hope you enjoy!



lightmybricks.com

© 2023 Light My Bricks Pty Ltd - Head Office: 4/26 Rushdale Street, Knoxfield VIC 3180, Australia. Phone: +61 420 643 543 | All Rights Reserved | Light My Bricks[™] sell LED lighting kits only. All LEGO[®] sets featured in images are sold separately. Light My Bricks[™] and the Light My Bricks logo, are trademarks and copyrights of Light My Bricks Pty Ltd. LEGO[®] is a trademark of the LEGO[®] Group of Companies which does not sponsor, authorise, or endorse this document.